
OPERATION MANUAL

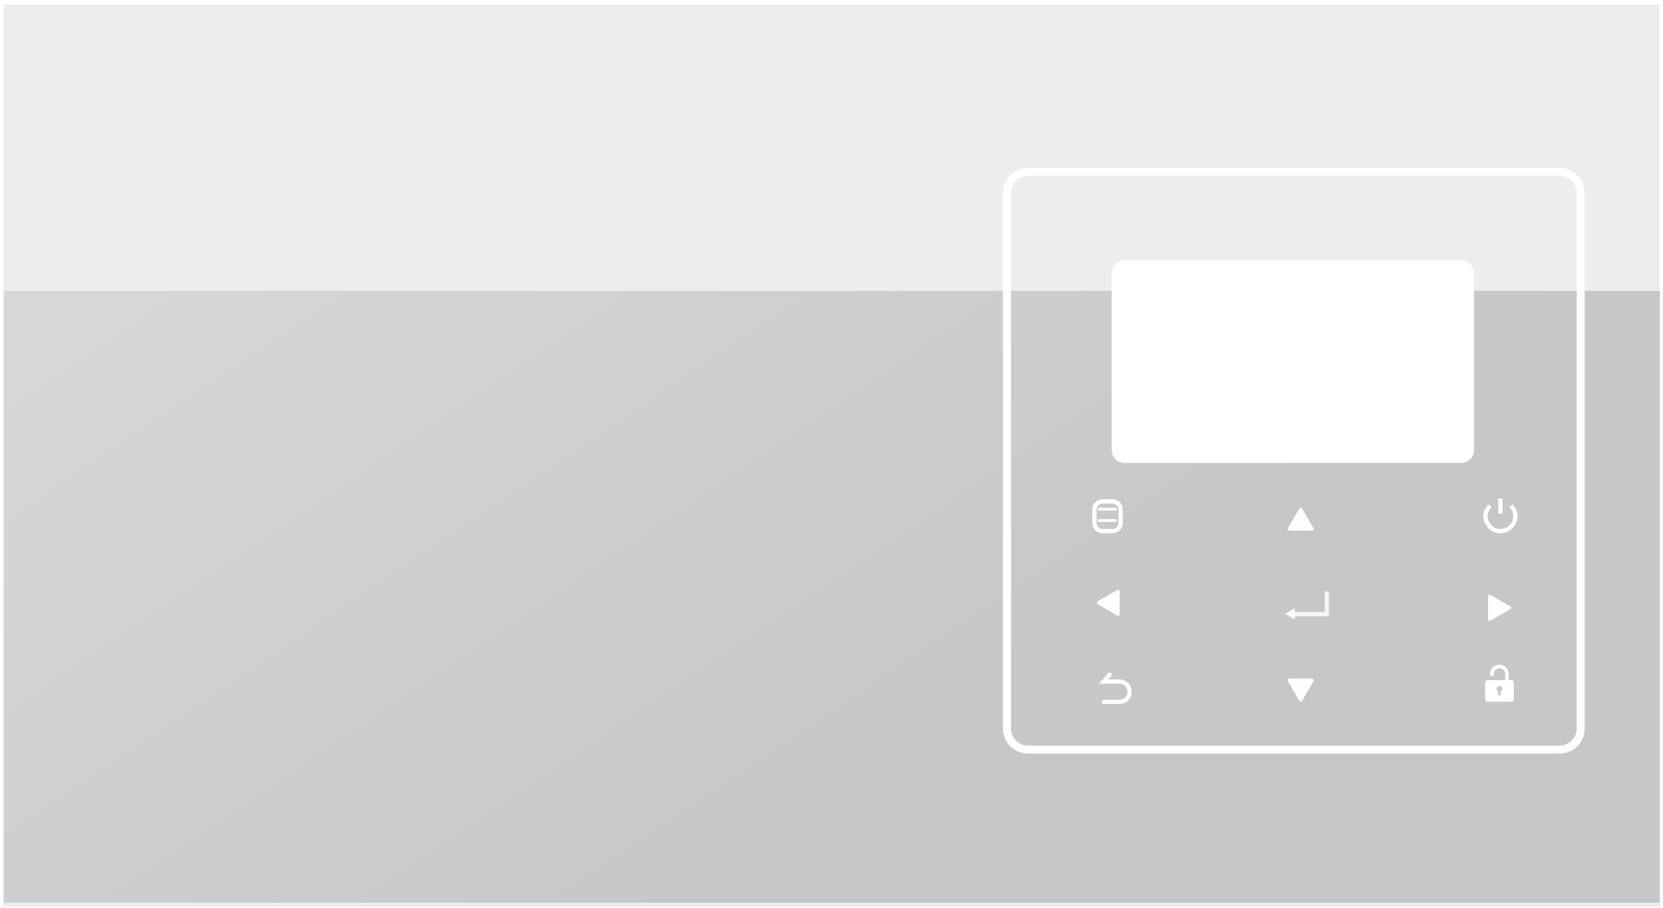

Original instructions.
Please read this manual carefully and keep it for future reference.
All the pictures in this manual are for illustrations purpose only.

CONTENTS

1 GENERAL SAFETY PRECAUTIONS 01

- 1.1 Safety signs 01
- 1.2 Notice to users 01
- 1.3 First power-on setting of wired controller 03
- 1.4 Restore initialization 04

2 OVERVIEW OF WIRED CONTROLLER 05

- 2.1 Operation interface description 06

3 FUNCTION INTRODUCTION 08

- 3.1 Unlocking/Locking operation 08
- 3.2 Power-on/off 09
- 3.3 Mode setting 11
- 3.4 Menu setting 13
- 3.5 User menu 13
- 3.6 Service menu setting 23
- 3.7 Project menu setting 35
- 3.8 Power failure memory function 44
- 3.9 Parallel function of wired controller 44

- 3.10 Upper computer communication function 46
- 3.11 Monitor wired controller function 46

4 ATTACHED TABLE 1:OUTDOOR UNIT ERRORS AND PROTECTION CODES 47

5 ATTACHED TABLE ABOUT MODBUS 51

- 5.1 Communication specification 51
- 5.2 Supported function codes and exception codes 52
- 5.3 Address mapping in register of wired controller 53

1 GENERAL SAFETY PRECAUTIONS

- This document is applicable only to the wired controller. Read this document and follow the instructions carefully before operating the wired controller.
- Always observe all the operating instructions.
- Hand these instructions and all other applicable documents to the end user.

⚠ WARNING

Follow the safety precautions in the INSTALLATION MANUAL for the correct use of the heat pump unit.

1.1 Safety signs

Action-related warnings in the document:

⚠ WARNING

It indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.

NOTE

Additional information.

1.2 Notice to users

If you are not sure how to operate the unit, contact your installer.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge provided that they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and maintenance shall not be made by children without supervision.
- The unit is marked with the following symbol:



This means that electrical and electronic products may not be mixed with unsorted household waste. Do not try to dismantle the system yourself. The dismantling of the system and the treatment of the refrigerant, oil and other parts must be done by an authorized installer and must comply with applicable legislation.

The unit must be treated at a specialized treatment facility for reuse, recycling and recovery. By ensuring this product is disposed of correctly, you will help to prevent potential negative consequences for the environment and human health. For more information, contact your installer or local authority.


Working conditions of the wired controller.

1.3 First power-on setting of wired controller


- When the controller is powered on for the first time, the following page appears on the screen. The user needs to press " ▲"" ▼" " ◄"" ►" to select the display language and click "↵".





- After the language setting is completed, select "YES", and then click " ↵ " to enter the SETTING ADDRESS interface.

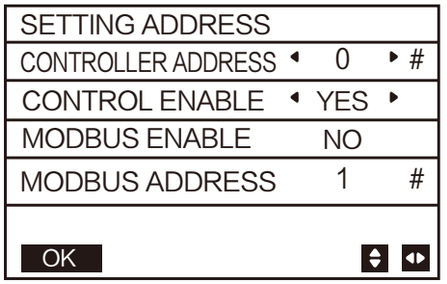

- After setting SETTING ADDRESS, click" ↵ " to enter GENERAL SETTING. Then after setting GENERAL SETTING, click " ↵".

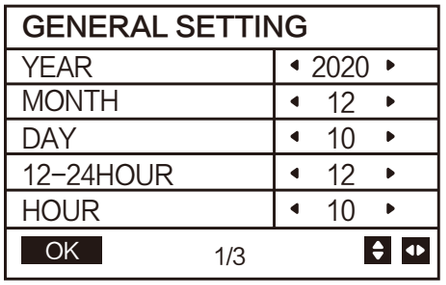

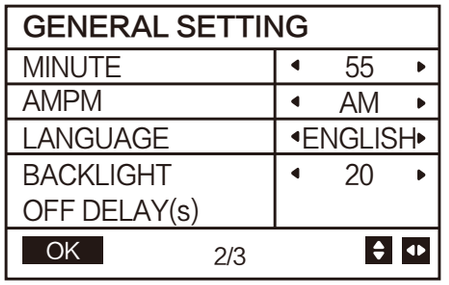


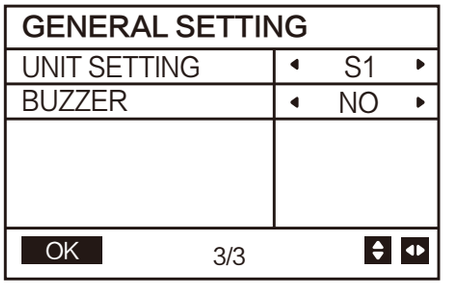

1.4 Restore initialization

If the user accidentally sets the display language of the wired controller to a language that the user does not know, the following three steps can be used to restore the wired controller to the factory setting and reset the display language:

1)Power off the wireline controller and power it on again. Press and hold ☰ + ⮌ + 🔓 to enter the following page within 60 seconds.

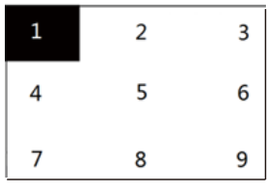

2)Press the buttons from left to right, from top to bottom, click ☰-> ▲ -> ⏻-->... Turn on 1, 2, 3, 4, 5, 6, 7, 8 and 9, wait for 100 % initialization, and enter the FCT page. After entering the FCT page, the version number is displayed. All set parameters of the equipment are reset to the default parameters, and saved. The timing settings and fault records are cleared. The equipment returns to the factory state. (exit FCT after power on again).

3)Follow the steps of first power-on setting of the wired controller.

2 OVERVIEW OF WIRED CONTROLLER

Basic using conditions:

1)Power range: power input: AC 8 V to 12 V;

2)Operating temperature: -20 ℃ to 60 ℃;

Operating humidity: RH40 % to RH90 %;


Where: HP—HEAT PUMP;


CO—ONLY COOLING;

FC—FREE COOLING.

It’s a general manual. The functions of different models are different. The wired controller automatically recognizes and hides irrelevant interfaces. Please set and inquire related parameters according to the outunit model.

2.1 Operation interface description

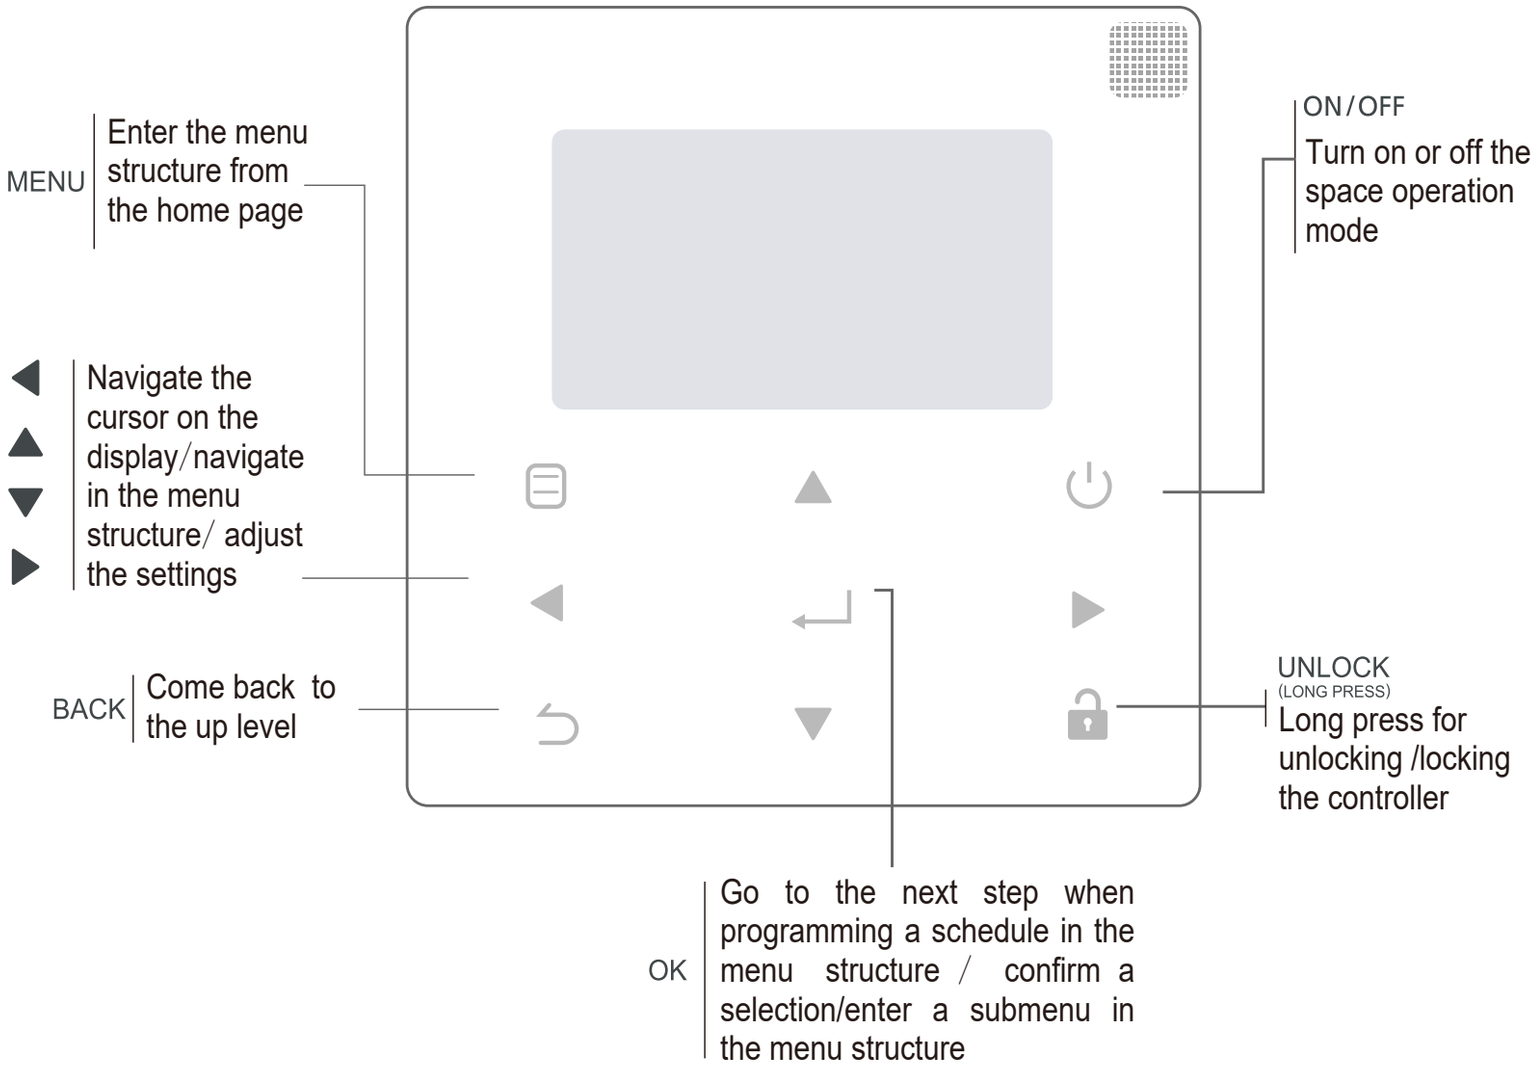

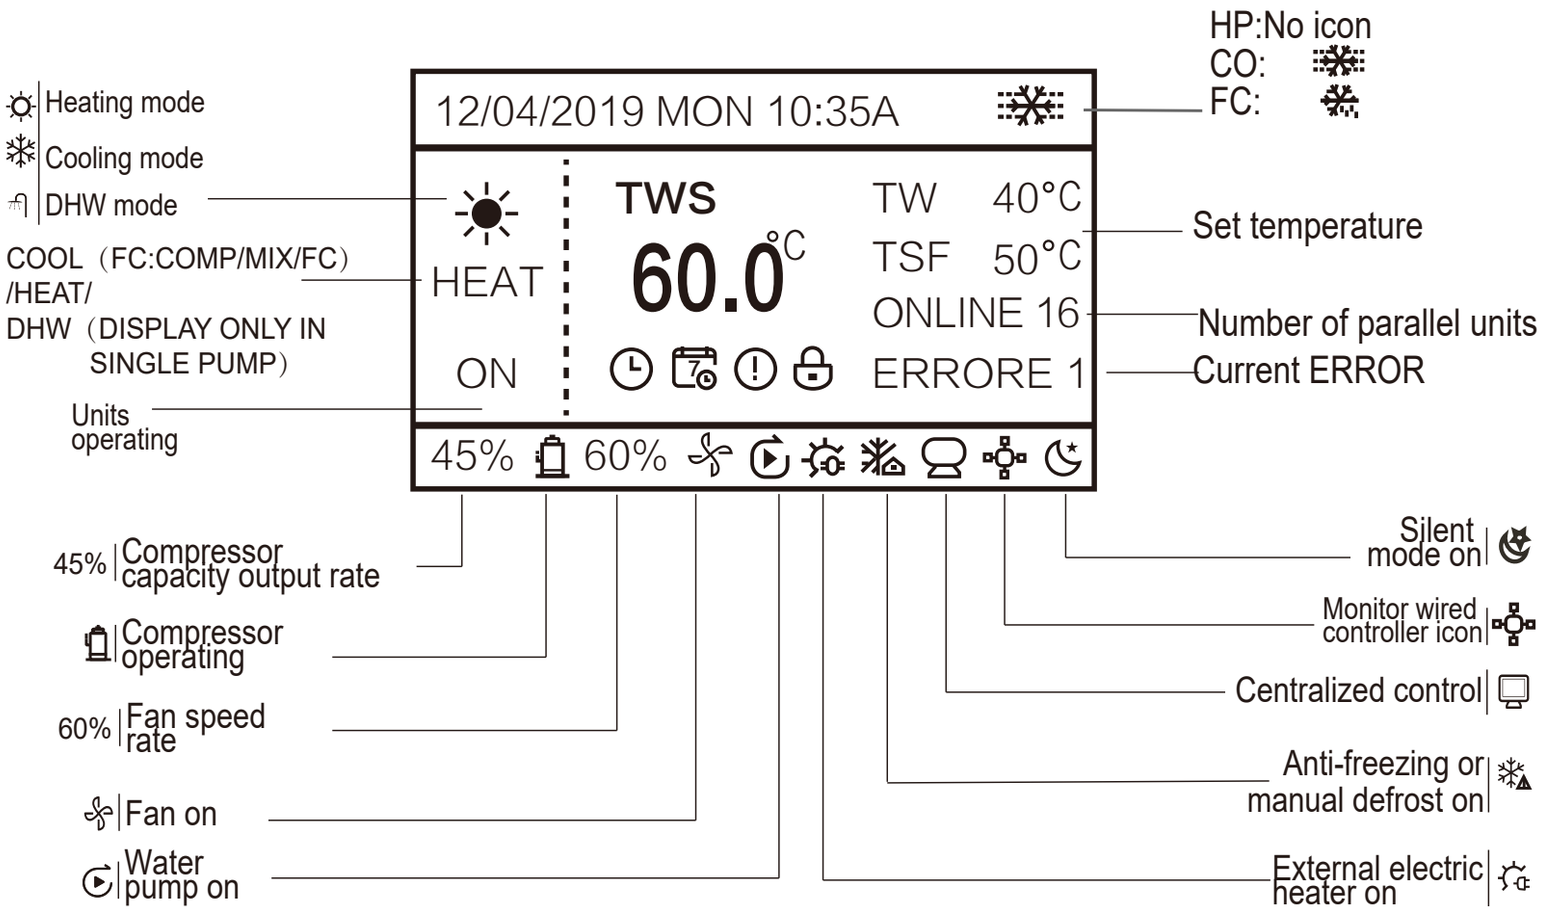

TWS/T5S: setting temperature

TW: total outlet water temperature

T5: tank temperature

TSF: safe temperature

	DAILY TIMER / WEEKLY SCHEDULE / ERROR / LOCK

3 FUNCTION INTRODUCTION

Power on for the first time or restore factory settings, you need to preset: SETTING ADDRESS and GENERAL SETTING. Click " ↵ " after setting. Please follow the interface prompts.


3.1 Unlocking/locking operation


When the wired controller is locked, press and hold the " 🔓 " button for 3 s to unlock it. Then the lock icon is not displayed and the wired controller can be operated.

When the wired controller is unlocked. press and hold the " 🔓 " button for 3 s to unlock it. Then the lock icon is displayed and the wired controller cannot be operated. When there is no operation for continuous 60 s on any page, the wired controller returns to the home page and automatically locks, displaying the lock icon.

NOTE

It can only be locked by long pressing the " 🔓 " button for 3 s under the main page, and it is invalid under the " ☰ " page.

















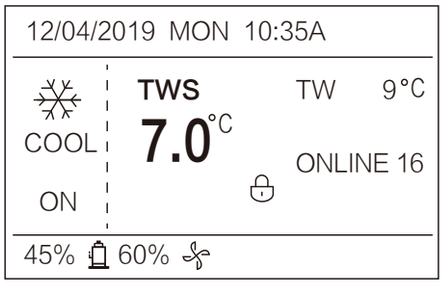


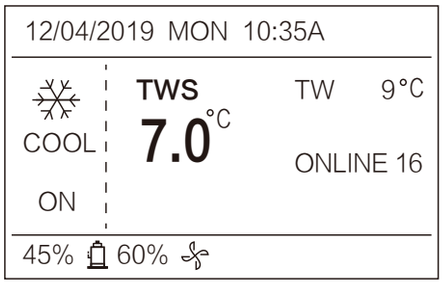

3.2 Power-on/off


When the wired controller is unlocked and the unit is on, "⏻"can be pressed to power off the unit under the home page only. And it can be pressed to power on the unit when the unit is off.


In the unlocked state, the set temperature can be adjusted by pressing " ▲ " " ▼ " button. And you need to Press "↵" button to confirm after setting. It’s invalid without confirmation within 5 s.

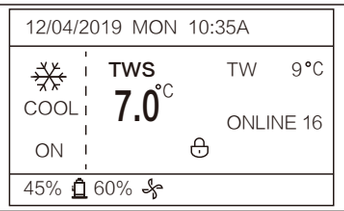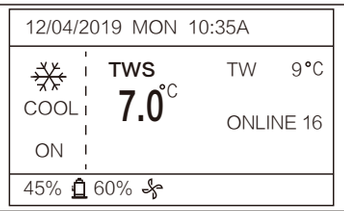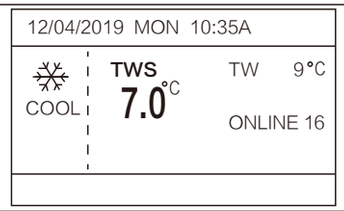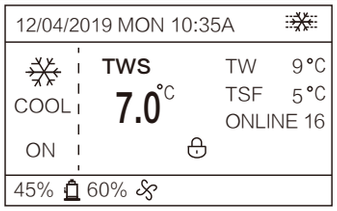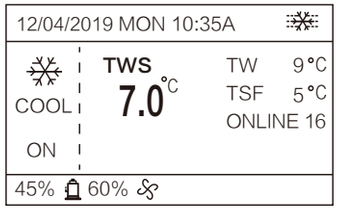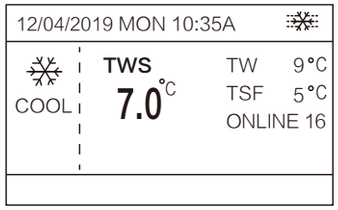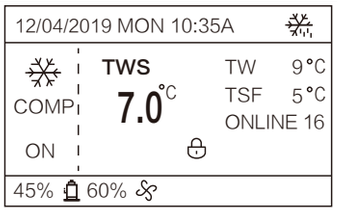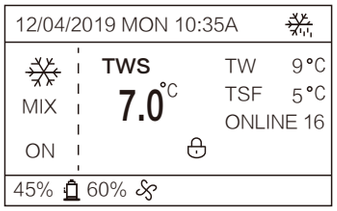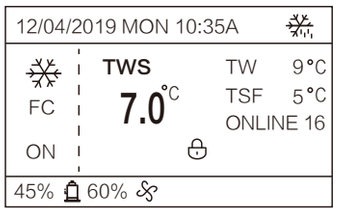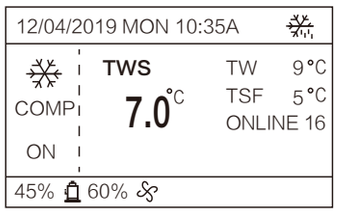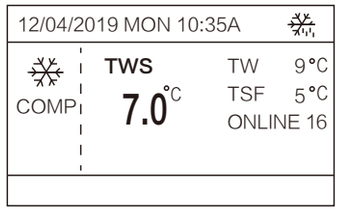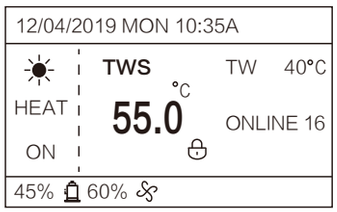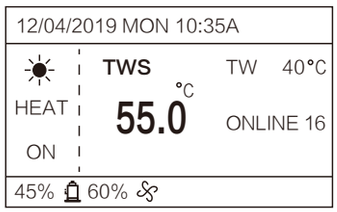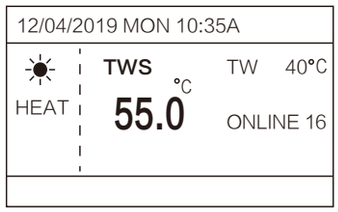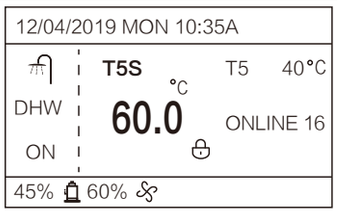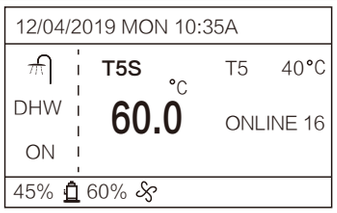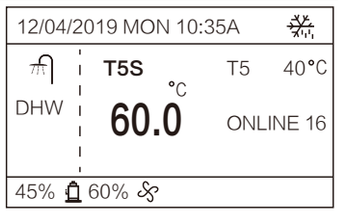
	LOCK	UNLOCK: ON	UNLOCK: OFF
HP-COOLING			
CO-COOLING			
FC-COOLING	  		
HP-HEATING			
HP-HOT WATER			

3.3 Mode setting

In Unlock mode, Press "☰" button to enter the menu setting interface, Press "▼" and "▲" buttons to select "MODE" and set a mode, and Press "↵" button as shown in the above figure to access the submenu (mode setting). As shown below: three modes available.

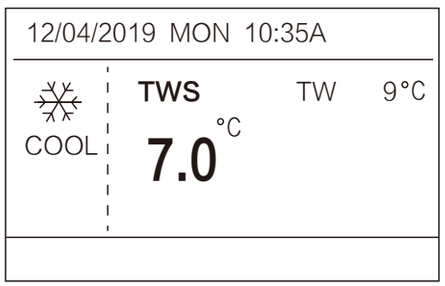

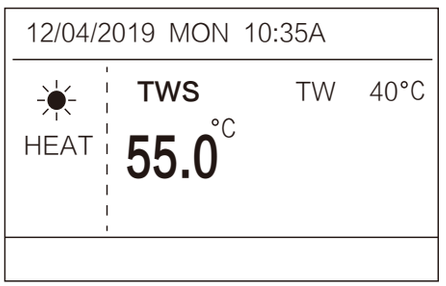

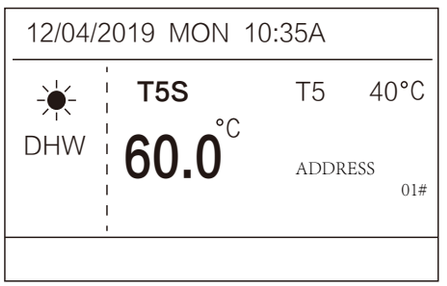

Cycle: Cooling-->Heating-->DHW-->Cooling. Skip the mode cycle when there is no corresponding mode. The DHW mode is divided into single pump (no need to select the address) and multiple pumps (need to select address 00-15, and the address of the unit without DHW function is directly skipped).

Only Tws/T5 s and address can be set in cooling、heating and DHW mode. Tw/T5 can only be displayed but not be set. DHW can only be power on/off under the MODE setting.The detailed steps are as follows: Enable the DHW function from Service Menu-->Enable the DHW from User Menu-->Define the Priority of DHW from User-->Activate the DHW function from Mode Menu.

HP-Cooling setting range lower limit is subject to the low water outlet control setting under SERVICE MENU. CO/FC-Cooling setting range lower limit is subject to the lowest outlet water temperature set by antifreeze ratio under PROJECT MENU.

NOTE


When Tsafe is set below 5 ° C /41 ° F, antifreeze must be added to the antifreeze system and the following requirements must be met:


- Use 30 % ethylene glycol antifreeze system or other antifreeze system similar to the freezing point;
- The freezing point temperature of the antifreeze solution must be less than the coldest local temperature minus 5.5 °C /9.9 °F

Press " ↵ " to save the settings after setting and back to homepage. Or press " ⮌ " to back. When there is no operation for continuous 60 s, it will save the settings and back to homepage.

3.4 Menu setting

When the wired controller is unlocked, press"☰" to enter menu setting page as follows:

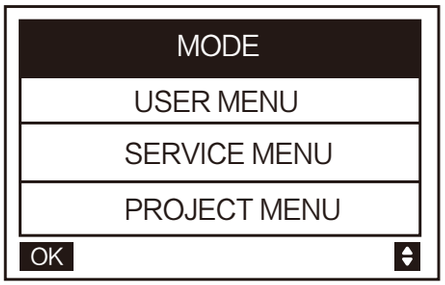

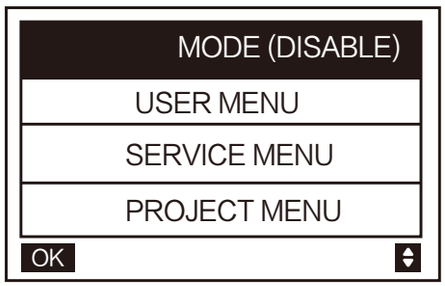


The default selection is "MODE" and choose the menu you need by pressing "▲▼" . Press "↵" to enter its submenu or back to homeage by "⮌". Back to homepage if there is no operation for 60 s under menu page.


NOTE

The mode menu is invalid when the unit is controlled by modbus or host computer and display as above.

3.5 User menu


Select "USER MENU" to enter the user menu. The interface display is as follows:

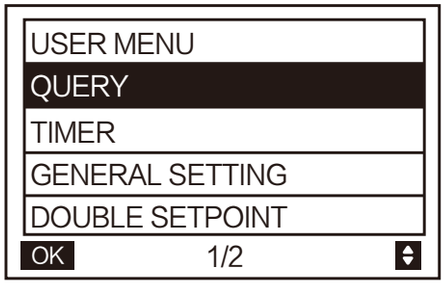

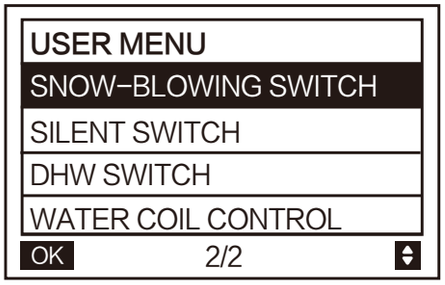

Users choose functions by "▲▼".

Select "QUERY" in the "USER MENU" interface to access the query function. The interface display and operation are as follows:

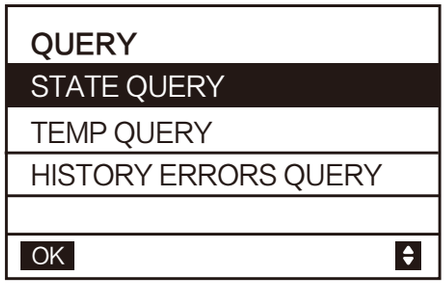

State query

Select "STATE QUERY" and press "↵ ". Display as follows:


STATE QUERY	
SELECT ADDESS	◂ 11 ▸ #
OPERATION STATE	STANDBY
RUNNING MODE	COOL
CURREN SLIENT MODE	NIGHT SILENT1
BACK	

Select address by pressing "◄" , "►" to view the status of the unit at that address.

Back to upper menu by " ⮌ ".

Temp query


Select "TEMP QUERY" and press"↵ ". Display as follows:

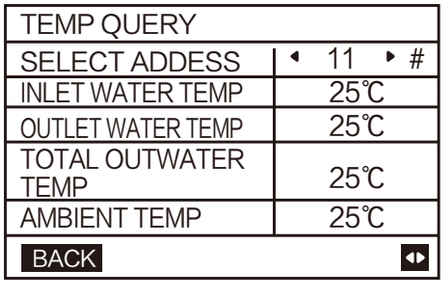

Select address by pressing "◄", "►" to view the temperature of the unit at that address. Back to upper menu by " ⮌ ".

History errors query


Select "HISTORY ERRORS QUERY" and press"↵ ". Display as follows:

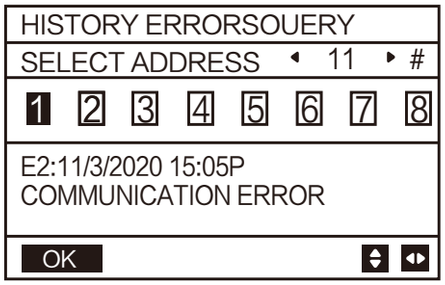


Select address by pressing "◄", " ►"to view the history errors of the unit at that address. Press "▲" "▼" to choose the history error that you want and the number of errors that can be viewed is 16.

Timer setting

Select “TIMER” and press"↵". Display as follows:

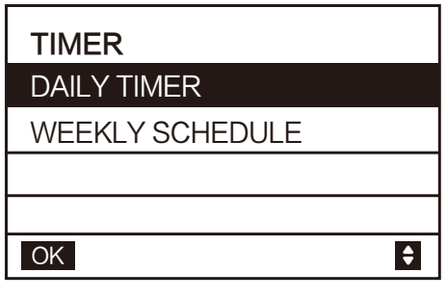


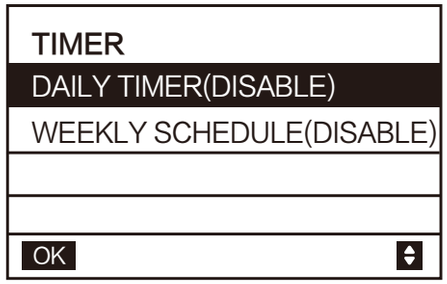


NOTE


After MODBUS control and the remote control of the external machine are used, the daily and weekly time settings of the wired controller are invalid, and users cannot enter the timing menu for setting.

When MODBUS control and the remote control of the external machine are invalid. Select "DAILY TIMER" and press "↵". Display as follows:

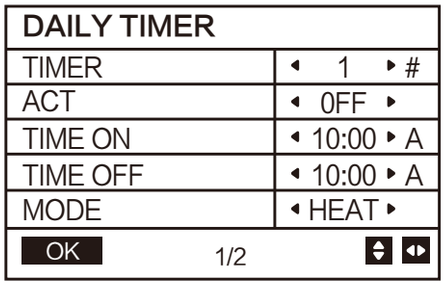

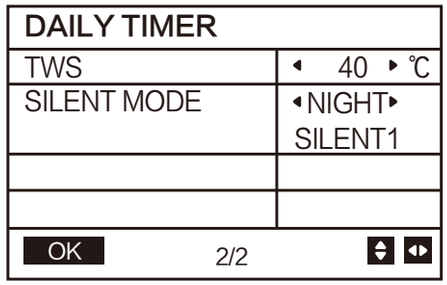

Only one setting is enabled between "DAILY TIMER" and "WEEKLY SCHEDULE". If any of the pattern in "WEEKLY SCHEDULE" is set to ON, "DAILY TIMER" is disabled. "DAILY TIMER" can be set across days, but "WEEKLY SCHEDULE" can't.Users can set up to two timers, and set the ON or OFF time (set the interval of time to 10 minutes)、operation mode(there are heating, cooling and DHW modes for single pump; only cooling and heating modes can be selected for multiple pumps, and it cannot be set as DHW mode) and temperature setting for each segment of timer. It's invalid if the ON and OFF time are same. Display as follows:

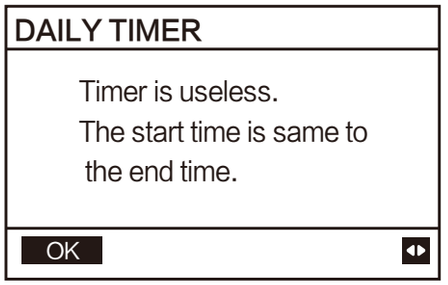

Operating Introduction:

Press "▲" "▼" to select TIMER, ACT, TIME ON, TIME OFF, MODE, TWS or SILENT MODE. When the cursor stays at "TIMER ", press "◄" and "►" to select "TIMER 1" or "TIMER 2". When it stays at other items, we can also use " ◄", " ►"to adjust corresponding settings. After setting, press " ↵ " to confirm saving, or press "⮌" to cancel setting and return to the previous interface.

If Time1 T.ON is set the same as Time1 T.OFF, then the setting is invalid, the ACT option for the timer of this segment jumps to "OFF", the setting of Timer2 is the same as that of Timer1, and the timing interval of Time2 can cross with that of Time1.


For example, if Timer1 T.ON is set to 12:00 and Timer1 T.OFF is set to 15:00, then the values of Timer2 T.ON and Time2 T.OFF can be set in the range of 12:00-15:00. If the time interval crosses, the machine will be powered on at the time T.ON which is set in Timer1 or Timer2, and will be powered off at the time T.OFF which is set in Timer1 or Timer2.


After the daily timer function setting is enabled, there will be corresponding prompts displayed on the homepage.


When two timers overlap, the second setting takes precedence.

Weekly schedule setting:

Select "WEEKLY SCHEDULE" and press "↵". Display as follows:

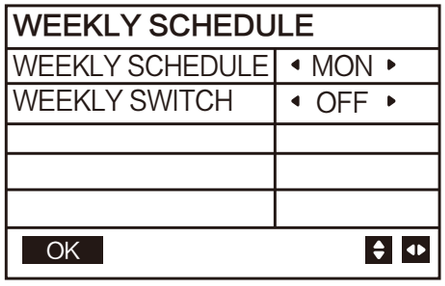

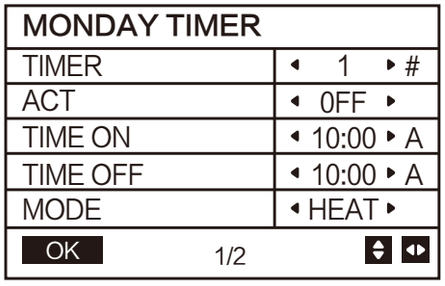

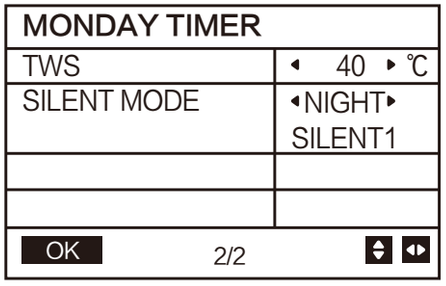

Press "▲" and "▼" buttons to select "WEEKLY SCHEDULE" or "WEEKLY SWITCH". And press "◄"or" ►"buttons to select Monday to Sunday.

After changing a setting, you need to press "↵" to confirm or enter the submenu. For "WEEKLY SWITCH", "OFF" means not to set the timing for this day or cancel the set timing. When change to "ON" and confirm, you will enter the day timer. The operation is the same as the day timer. The page refers to the day timer. The top displays the set day and Timer 1 or Timer 2 for

that day.


There can be up to 2 timings in a day of weekly timing, and each timing needs to be set on and off time (set interval is 10 minutes).

Operating Introduction:

Press "▲" and "▼" to select "WEEKLY SCHEDULE". Select the day you need by "◄ " or " ► ", and press"↵" to enter it. Then you can switch between TIMER, ACT, TIME ON, TIME OFF, MODE, TWS and SILENT MODE by "▲" and "▼" . Refer to the operating introduction of "DAILY TIMER".

General setting:

Select "GENERAL SETTING" and press"↵". Display as follows:

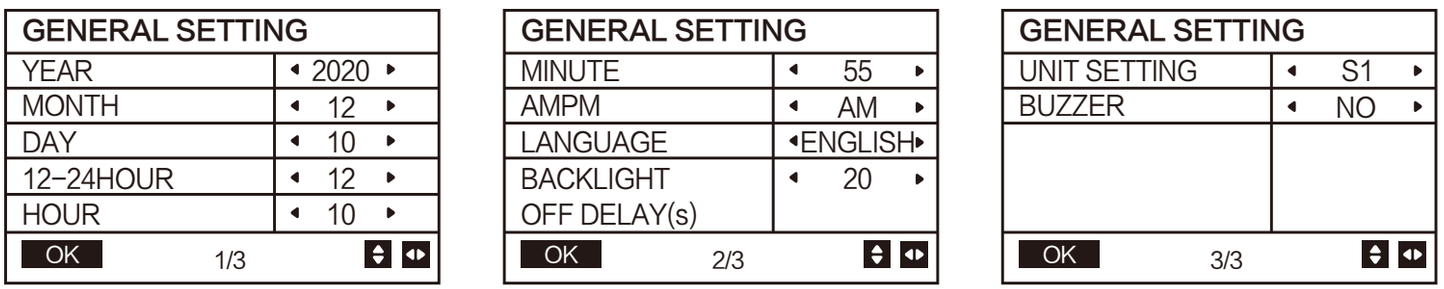


Press "▲" and "▼" to select the date, time, time format, language, unit setting and buzzer to be set. Adjust their parameters by "◄" or "►", and press "↵" to save. The backlight time setting range is 10-1200 s, the default is 60 s, and each adjustment is 10 s.

Back to previous page by "⮌" after setting.

Double Setpoint

Select "DOUBLE SETPOINT" and press"↵". Display as follows:

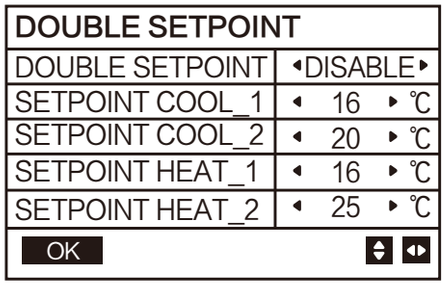


Press "▲" and "▼" to select items and " ◄ " or " ►" to adjust parameters.

the lower limit of the set range of HP refrigeration is subject to the low water outlet control set under SERVICE MENU, and the lower limit set for CO/FC refrigeration is subject to the minimum water outlet set under the antifreeze ratio set under PROJECT MENU.

Snow-Blowing switch

Select "SNOW-BLOWING SWITCH" under "USER MENU" page and press"↵". Display as follows:

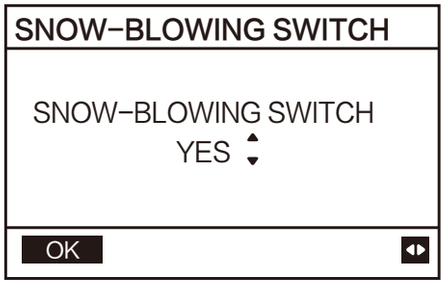


Press "▲" and "▼" to select "YES" or "NO" and press"↵" to confirm. "YES" means the function is valid, "NO" means invalid.

NOTE

Some models do not have this function. Please refer to the instructions of the outdoor machine for whether they have anti-snow control function.

Silent mode:

Select “SILENT SWITCH” and press"↵". Display as follows:

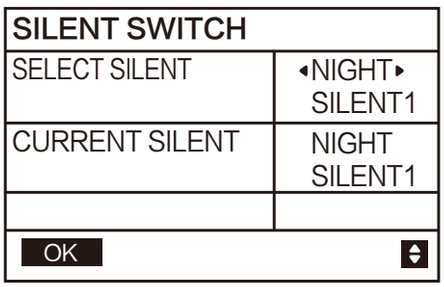



Press "▲" and "▼" to select "SELECT SILENT ", press" ◄ "or " ►"to select the mode you need (7 types: NIGHT SILENT1-4, STANDARD, SILENT and SUPER SILENT), and press "↵" to save. Users can check whether it is the mode they want here and press "⮌ " to back if there is no problem. Once the silent mode turned on, in homepage light up.

NIGHT SILENT 1	6/10h
NIGHT SILENT 2	6/12h
NIGHT SILENT 3	8/10h
NIGHT SILENT 4	8/12h

DHW SWITCH

Press "▲" and "▼" to select "DHW SWITCH" under "USER MENU" page and press "↵" . Display as follows for single heat pump mode or multiple heat pumps mode:

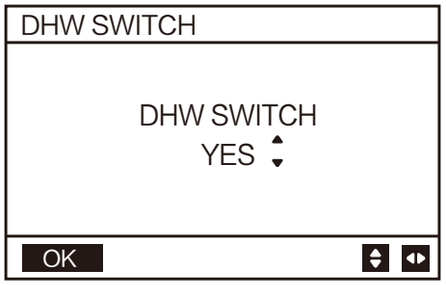

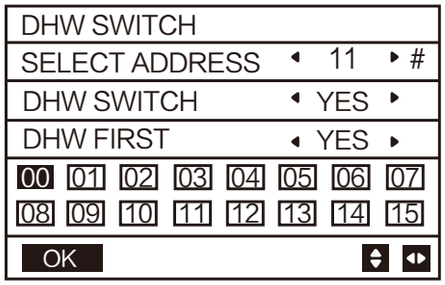

Press "▲" and "▼" to switch between SELECT ADDRESS, DHW SWITCH and DHW FIRST. Then press"◄ "or "►"to adjust parameters.

Only when DHW SWITCH selects YES, the following can be set.


NOTE

DHW SWITCH is only available for custom made DHW models. DHW SWITCH is displayed only when enable the DHW function from Service Menu. Water Coil Control.

Water Coil Control

Press "▲" and "▼" to select "WATER COIL CONTROL" and press "↵".

Display as follows for single heat pump mode or multiple heat pumps mode:

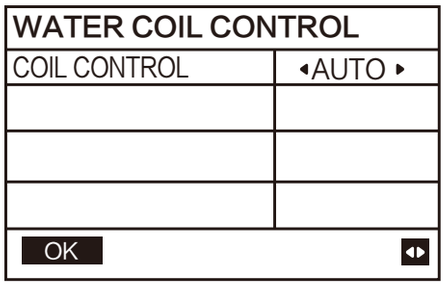

Press "▲" and "▼" to select "COIL CONTROL" and press "◄" or " ►" to select control mode:


AUTO (automatically control), MANUALON (with water coil), MANUALOFF (without water coil). Press "↵" to save. Press "⮌" to exit this page.

NOTE

Water Coil Control is only applicable to FC models.


3.6 Service menu setting

Password input: Please contact us Select "SERVICE MENU" and press "↵" . The screen prompts for a password, as shown in the figure below:

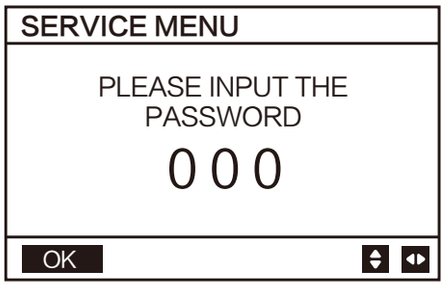



Press "▲" and "▼" buttons to change the number to enter, and Press "◄" and "►" buttons to change the bit code to enter. After the number is entered, the display is not changed. After entering the password, Press "↵" button to enter the interface or Press "⮌" button to go back to the previous interface.


Display as follows if the input is incorrect:

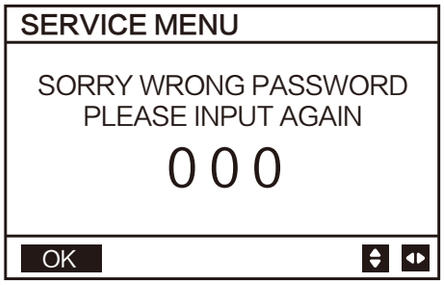

Enter setting page as follows if the input is correct:

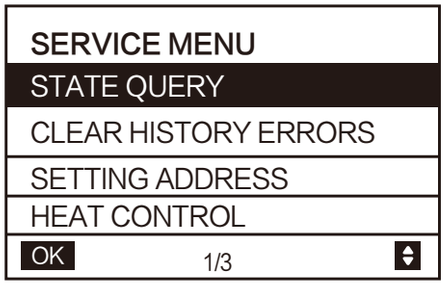


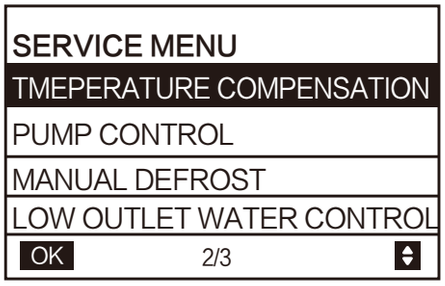

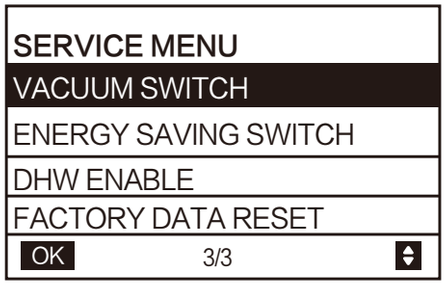

State query


Press "▲" or "▼" to select "STATE QUERY" under "SERVICE MENU" page. Then press "↵" to enter submenu.

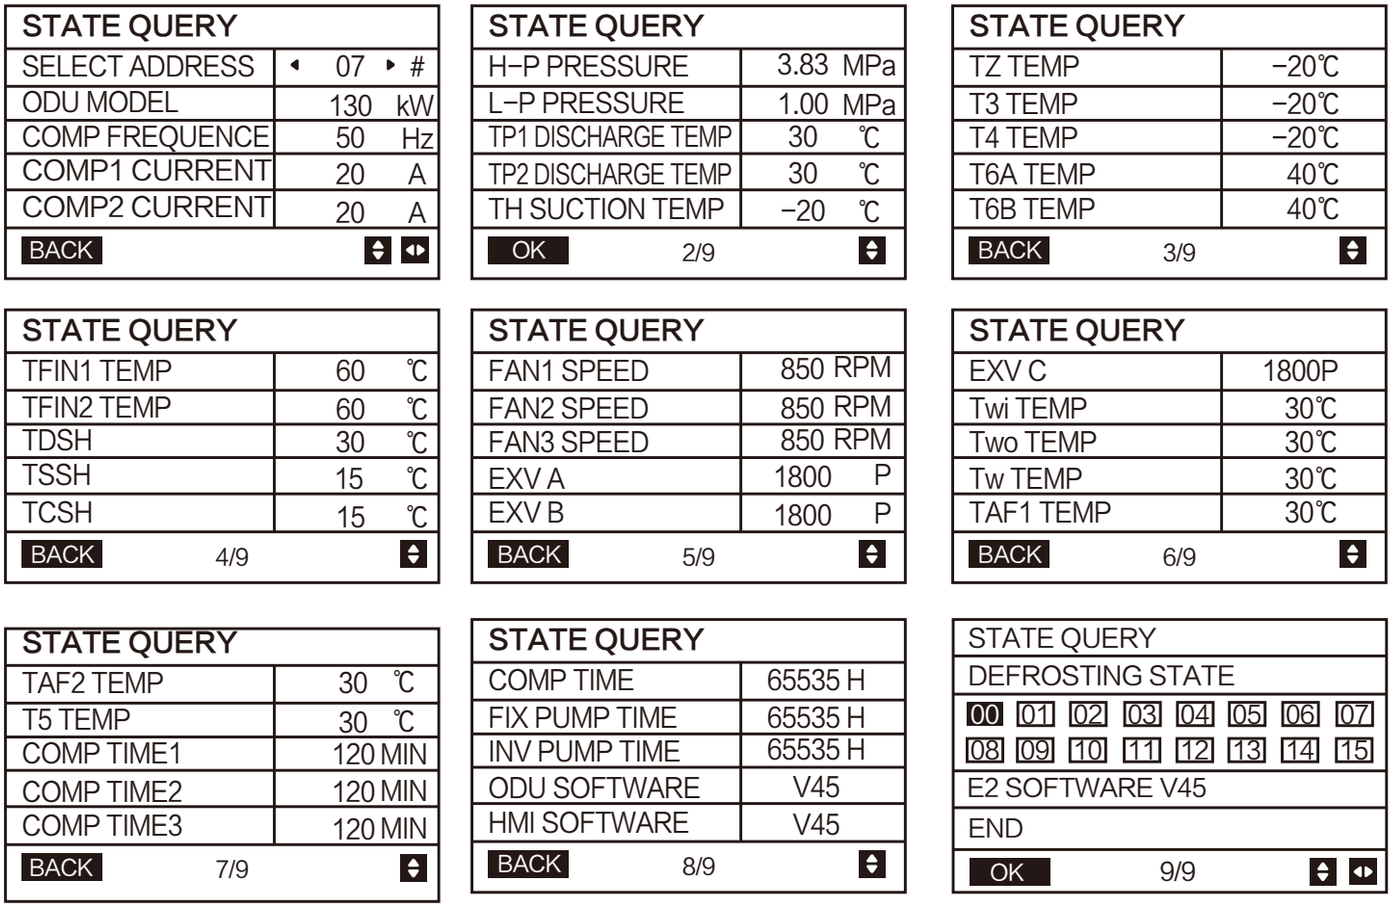


Press " ◄" or " ►" to select the address of module to view (the offline address is skipped automatically). There are 9 pages and 41 state values. Press "▲" or "▼" buttons to select the different page.

Clear history errors:


Press "▲" or "▼" to select "CLEAR HISTORY ERRORS" and confirm by "↵ ".

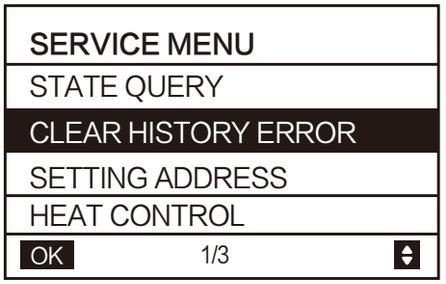

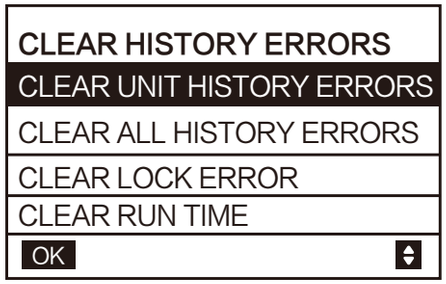

Press "▲" or "▼" to select "CLEAR UNIT HISTORY ERRORS" and press "↵" to confirm.


Display as follows:

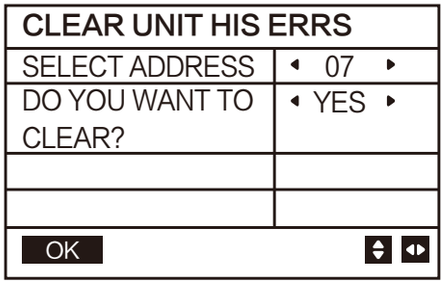


Press"▲" or "▼" to select "SELECT ADDRESS" and press "◄"or "►"to select address value.

Press "▲" or "▼" to select clear or not, and press "◄" or "►"to select YES or NO, and press "↵" to confirm.

Press"▲" or "▼" to select "CLEAR ALL HIS ERRS" and press "↵" to confirm. Display as follows:

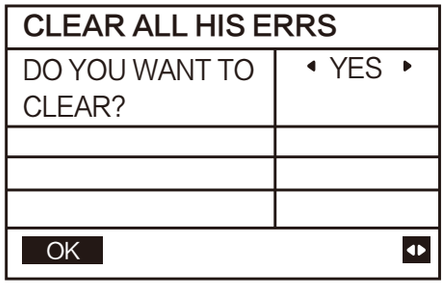


Press"▲" or "▼" to select "CLEAR LOCK ERROR" and press "↵"to confirm. Display as follows:

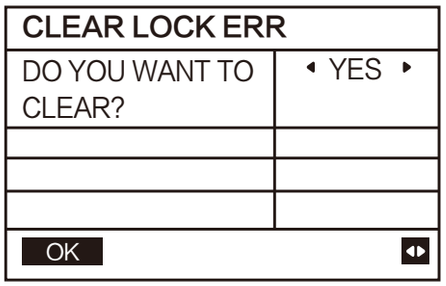

press "◄" or "►" to select YES or NO, and press "↵ " to confirm.

Press"▲" or "▼" to select "CLEAR RUN TIME" and press " ↵ " to confirm. Display as follows:

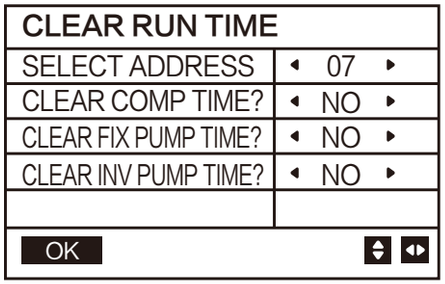



Press "▲" or "▼" to select "SELECT ADDRESS", press "◄" or "►" to select address value.

Press "▲" or "▼" to select clear or not, and press "◄" or "►" to select YES or NO, and press "↵ " to confirm.

Setting address :

Press "▲" or "▼" under “SERVICE MENU” page to select "SETTING ADDRESS" (Can also enter by combining buttons pressing " ⊟ ", " ►" for 3 s). Press " ↵" and enter submenu.

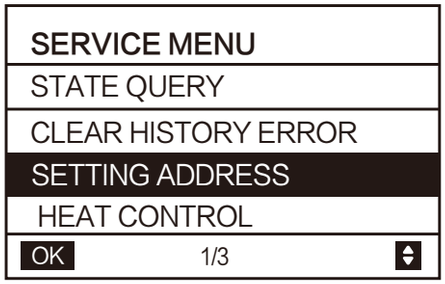

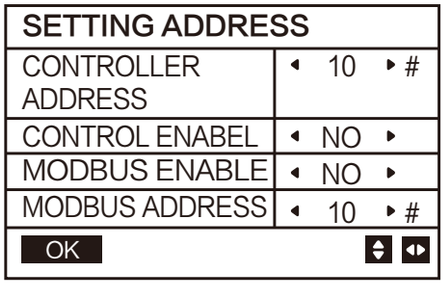



Press "▲" or "▼" to select item and press "◄" or " ►" to set value. Then press "↵" to confirm and "⮌" to back.

Heat control


HEAT1 means pipe electric heating in cooling/heating mode. HEAT2 means tank electric heating in DHW mode.


Press "▲" or "▼" to select "HEAT CONTROL" under "SERVICE MENU" page. Press "↵" and enter submenu.

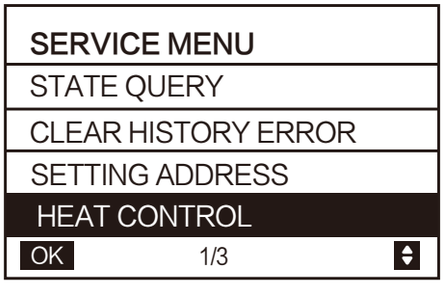


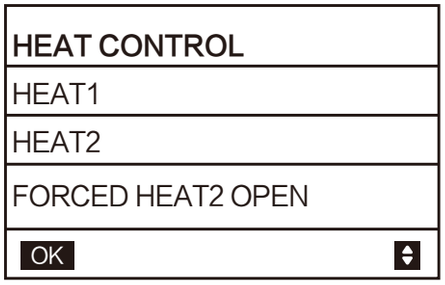



Press "▲" or "▼" to select item to be set. Press"↵"and enter submenu.

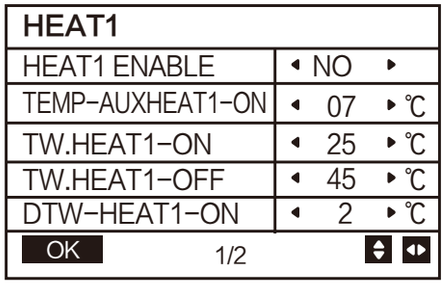

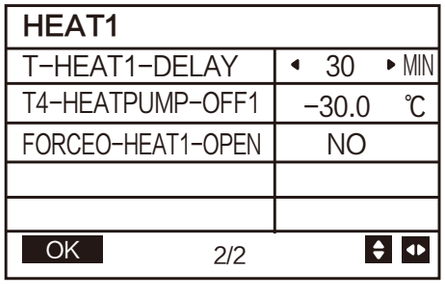

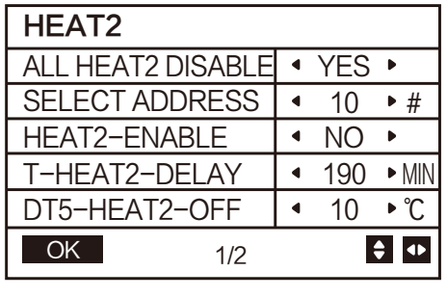

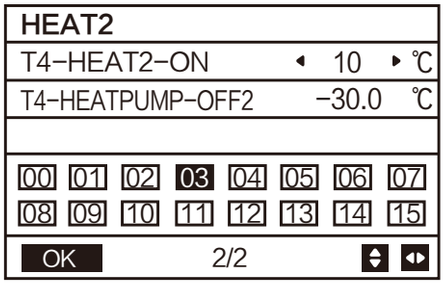


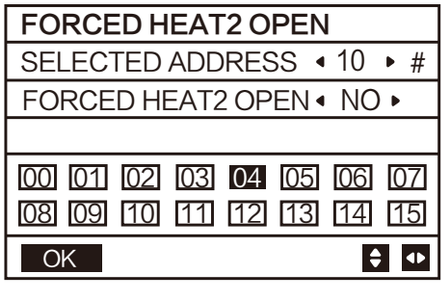



Press "▲" or "▼" to select item and press "◄" or " ►" to set value. Then press "↵" to confirm and "⮌" to back.

Temperature Compensation:


Press "▲" or "▼" to select "TEMPERATURE COMPENSATION" under "SERVICE MENU" page. Press "↵" and enter submenu.

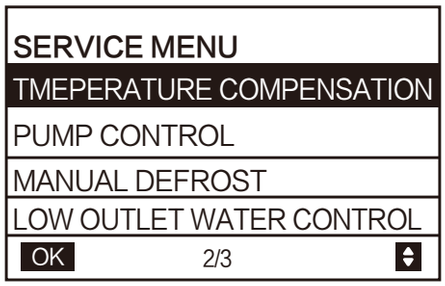


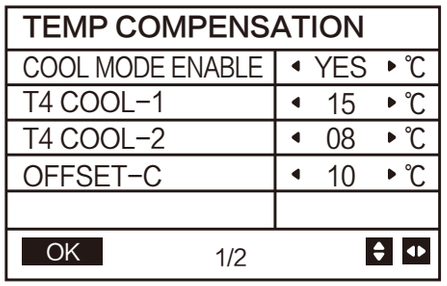

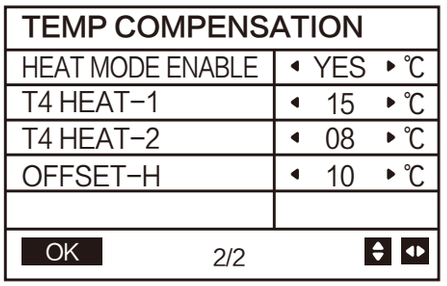



Press "▲" or "▼" to select item and press "◄ " or " ► " to set value. Then press "↵" to confirm.

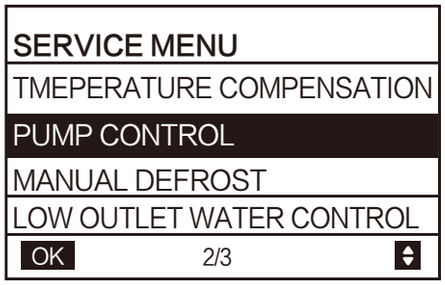

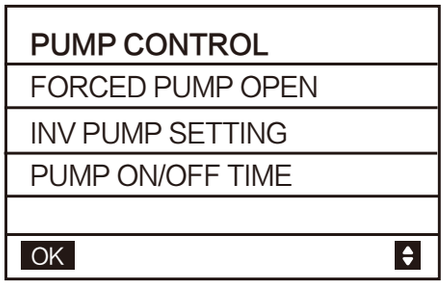


Press "▲" or "▼ to select “FORCED PUMP OPEN” . Press "↵ " and enter submenu.

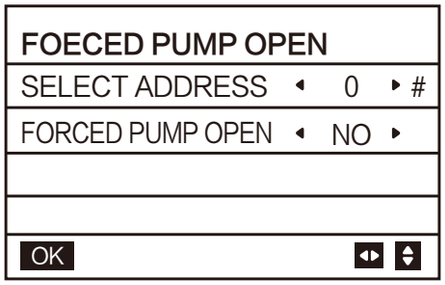

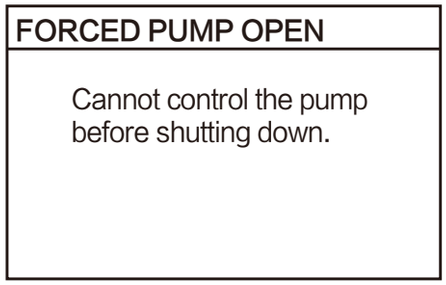

Under “FORCED PUMP OPEN” page, press "▲" or "▼" to select item and press " ◄ "or " ► " to set value. Press" ↵ "to confirm or "⮌"to back. If the unit at that address is ON, the pump cannot be controlled by the wired controlled. Display as above.


Under "INV PUMP OPEN" page, press "▲" or"▼" to select item and press "◄ " or "► "to set value. Press "↵ " to confirm or "⮌" to back.

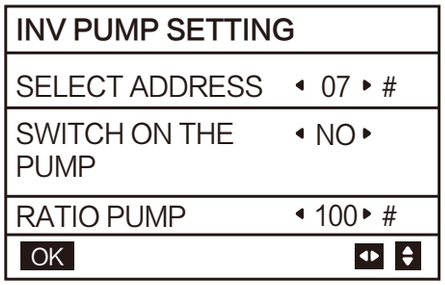

NOTE

Can only be set under a single pump. The setting range of RATIO-PUMP is 30 % to 100 %. It should ensure its flow meet the requirement of whole unit, otherwise the unit may be damaged.

Under "PUMP CONTROL" page, press "▲" or "▼" to select item and press " ◄ " or " ► " to set value. Press "↵ " to confirm or "⮌" to back.

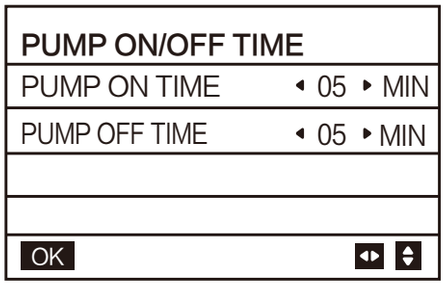



Parameter setting requirements are as follows:

	Set range	Default value	Adjustment range
PUMP ON TIME	5 min to 60 min	5	5
PUMP OFF TIME	0 min to 60 min	0	5

Manual Defrost

Press "▲" or "▼" to select "MANUAL DEFROST" under "SERVICE MENU" page. Press "↵" and enter submenu.

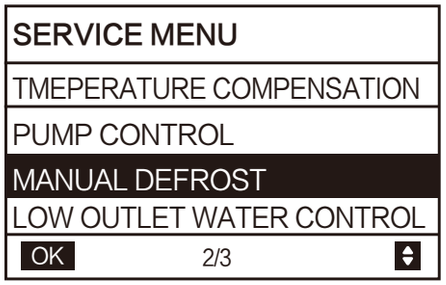

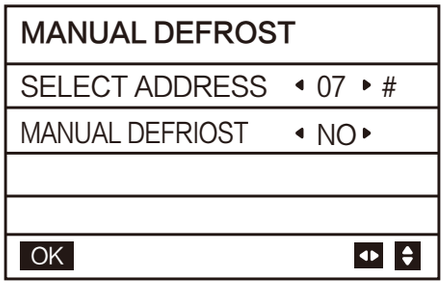



Press "▲" or "▼" to select item to be set and press " ◄ " or " ► " to set value. Press "↵" to confirm or "⮌" to back.

If the external unit successfully enters the defrost mode after the "MANUAL DEFROST" is turned on, the defrost icon will be displayed at homepage of the wired controller.


Low outlet water temperature control

Press "▲" or "▼" to select "LOW OUTLETWATER CONTROL" under "SERVICE MENU" page. Press "↵" and enter submenu. Suitable for HP-UNIT.

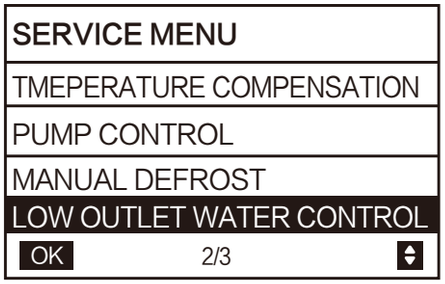

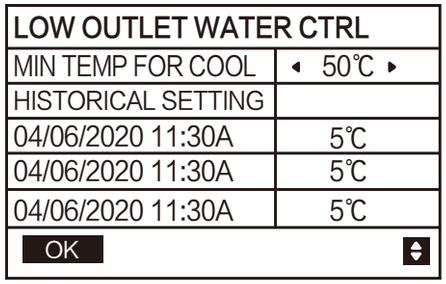


Press " ◄ " or " ► " to set value. Press "↵" to confirm or "⮌" to back. At this page, the historical minimum water outlet temperature setting can be viewed. When the setting temperature is less than 5 ℃, a prompt box will pop up:

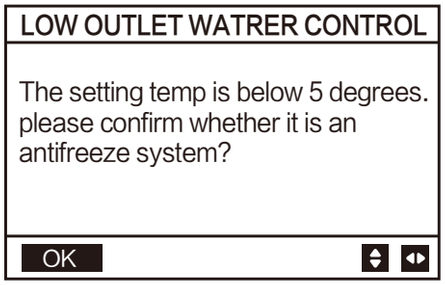


Vacuum mode

Before entering the vacuum mode, the wired controller needs to select off.


Press "▲" or "▼" to select “VACUUM SWITCH” under “SERVICE MENU” page. Press "↵"and enter submenu.

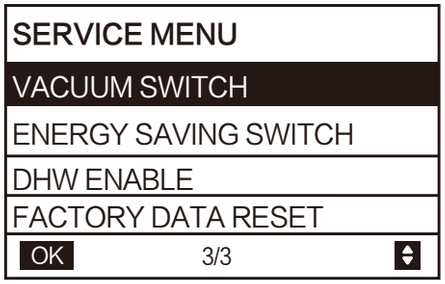


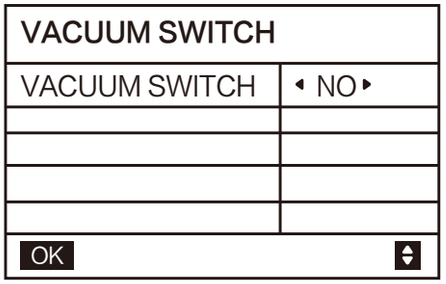

Press " ◄ " or " ► " to set YES or NO. Select YES and press "↵" to confirm, the dialog box is as follow. Press the " ↵" again to enter the mode.


Otherwise, press " ⮌ " , or select NO and press "↵ " to return to the previous screen.

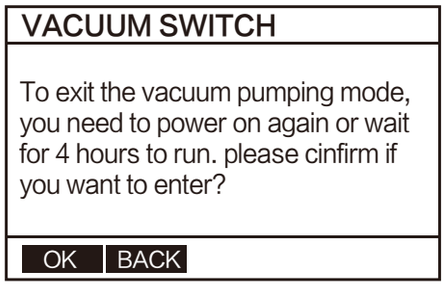


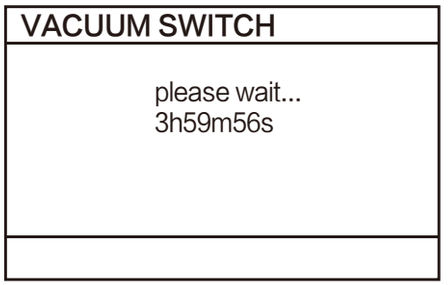

Energy saving mode

Press "▲" or "▼" to select "ENERGY SAVING SWITCH" under "SERVICE MENU" page. Press "↵" and enter submenu.

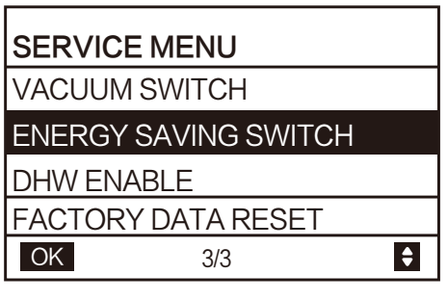

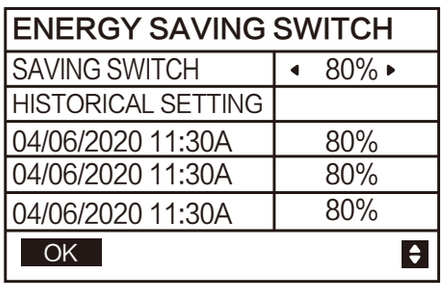


press " ◄" or " ►" to set value. Press "↵ " to confirm or "⮌" to back.

NOTE

Only applicable to MC-SU **-RN8L-B series models.For other models, please refer to the instructions of the outdoor machine.

DHW ENABLE

Press "▲" or "▼" to select "DHW ENABLE" under "SERVICE MENU" page. Press" ↵ " and enter submenu.

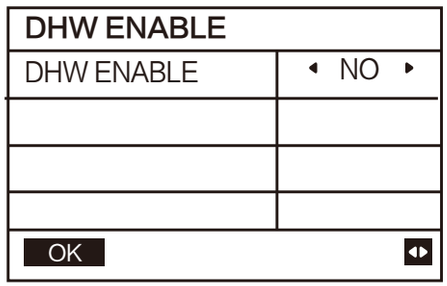

Press "▲" or "▼" to set YES or NO. Press" ↵ " to confirm or " ⮌ " to back.


NOTE

DHW ENABLE is only available for custom made DHW models.

Factory data reset:

Press "▲" or "▼" to select "FACTORY DATA RESET" under "SERVICE MENU" page.

Press "↵" and enter submenu.

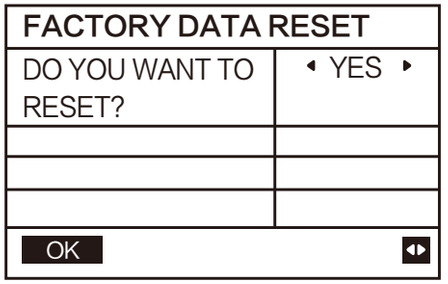


Press "▲" or "▼" to select corresponding item and press "◄" or " ►" to select restore or not. Press " ↵" to confirm or " ⮌ " to back.


3.7 Project menu setting

Password input: Please contact us.


Select "PROJECT MENU" and press " ↵" to entry. The screen prompts to enter the password, as shown in the figure below:

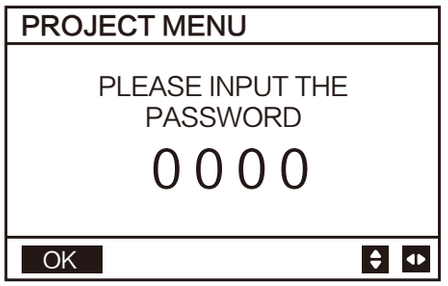



The initial password must be obtained by a professional. Press the "▲" or "▼" buttons to change the number to enter, and press the "◄" or " ►" buttons to change the bit code to enter. After the number is entered, the display is not changed. After entering the password, press the "↵" button to enter the interface; press the "⮌" button to go back to the previous interface; the display is as follows if the input is incorrect:

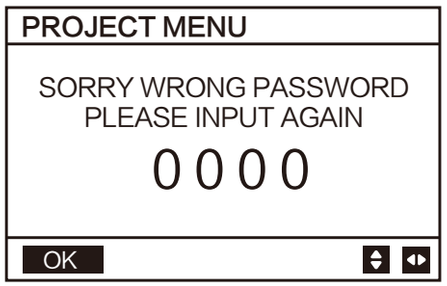

The query interface as follows is displayed if the input is correct:

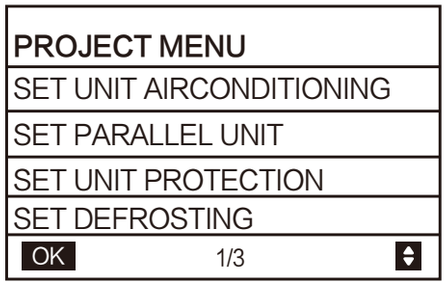


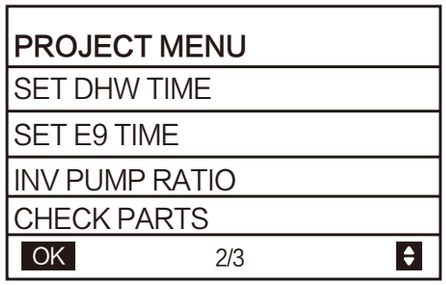


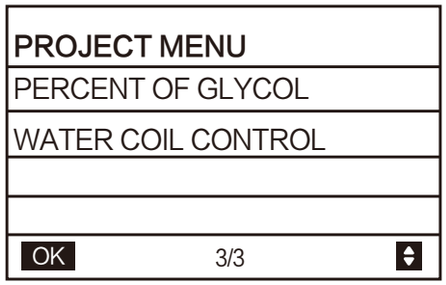

Unit Setting:

Select "SET UNIT AIRCONDITIONING" and press "↵" to entry. Display as follow:

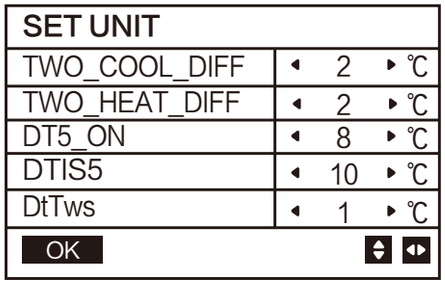

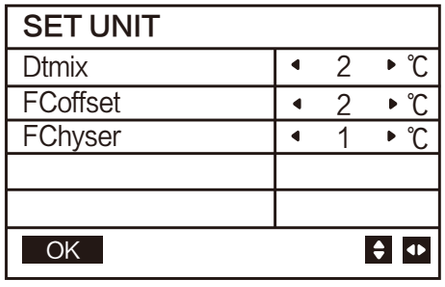

Press "▲" or "▼" to select item and press “ ◄” or “ ►” to set suitable temperature or time. Press "↵" to confirm. Back to homepage if there is no operation within 60 s.

Detailed setup information:

Parameter	Setting range	Note
Two_COOL_DIFF	1 ˚C∽5 ˚C	
Two_HEAT_DIFF	1 ˚C∽5 ˚C	
dT5_ON	2 ˚C∽10 ˚C	DHW
Dt1s5	5 ˚C∽20 ˚C	

Parallel units setting:

Select “SET PARALLEL UNIT” and press "↵ " to entry. Display as follows:

SET PAPALLEL UNIT	
TIM_CAP_ADJ	◂ 80 ▸ S
TW_COOL_DIFF	◂ 2.0 ▸ ℃
TW_HEAT_DIFF	◂ 2.0 ▸ ℃
RATIO_COOL_FIRST	◂ 50 ▸ %
RATIO_HEAT_FIRST	◂ 50 ▸ %
OK	


Press "▲" or "▼" to select item to be set and press "◄" or " ►" to set value. Press "↵" to confirm. Back to homepage if there is no operation within 60 s.

Detailed setup information:

Parameter	Setting range
Tim_Cap_Adj	60 s∽360 s
Tw_Cool_diff	1 ˚C∽5 ˚C
Tw_Heat_diff	1 ˚C∽5 ˚C
Ratio_cool_first	0 %∽100 %
Ratio_heat_first	0 %∽100 %

Unit protection setting:

Select “SET UNIT PROTECTION” and press "↵" to entry. Display as follows:

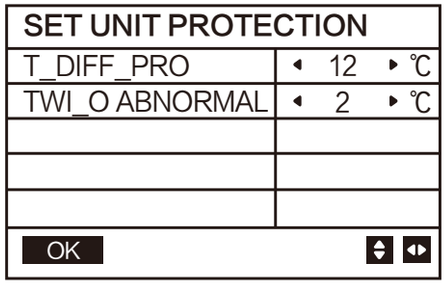


Press "▲" or "▼" to select item to be set and press "◄ "or "►" to set value. Press "↵" to confirm. Back to homepage if there is no operation within 60 s.

Detailed setup information:

Parameter	Setting range
T_DIFF_PRO	8 ˚C to 15 ˚C/8 ˚C to 25 ˚C (The range of Settings varies according to the mode)
TWI_O_ABNORMAL	1 ˚C to 5 ˚C

Defrosting Setting:

Select " SET DEFROSTING " and press "↵" to entry. Display as follows:

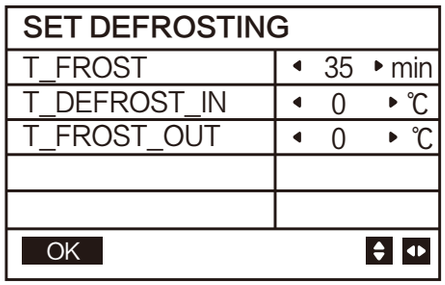

Press "▲" or "▼" to select item to be set and press "◄" or " ►" to set value. Press "↵" to confirm. Back to homepage if there is no operation within 60 s.

Detailed setup information:

Parameter	Setting range
T_FROST	20 min to 120 min
T_DEFROST_IN	-5 ˚C to 5 ˚C
T_FROST_OUT	-10 ˚C to 10 ˚C

DHW time setting:

Select " SET DHW TIME " and press "↵ " to entry. Display as follows:

SET DHW TIME	
SELECT ADDRESS	◂ 07 ▸ #
COOL MAX TIME	◂ 08 ▸ h
COOL MIN TIME	◂ 0.5 ▸ h
HEAT MAX TIME	◂ 08 ▸ h
HEAT MIN TIME	◂ 0.5 ▸ h
OK 1/2	

SET DHW TIME	
DHW MIN TIME	◂ 0.5 ▸ h
DHW MAX TIME	◂ 08 ▸ h
OK 2/2	


Press "▲" or "▼" to select item to be set and press "◄" or "►" to set value. Press "↵" to confirm. Back to homepage if there is no operation within 60 s.

Detailed setup information:

Parameter	Setting range
SELECT ADDRESS	0 to 15
COOL MIN TIME	0.5 h to 24 h
COOL MAX TIME	0.5 h to 24 h
HEAT MIN TIME	0.5 h to 24 h
HEAT MAX TIME	0.5 h to 24 h
DHW MIN TIME	0.5 h to 24 h
DHW MAX TIME	0.5 h to 24 h

E9 Error time setting:

Select “SET E9 TIME” and press "↵" to entry. Display as follows:

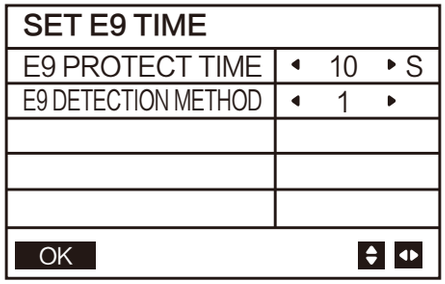

Press "▲" or "▼" to select item to be set and press "◄" or "►" to set value (setting range 2 to 20 s, default 5 s, adjust interval 1 s). Press " ↵ " to confirm. Back to homepage if there is no operation within 60 s. The setting range of " E9 DETECTION METHOD" is 1-2, default 1 (Method1: detect after pump starting. Method 2: detect before and after pump starting.)

Inverter pump output setting:

Select " INV PUMP RATIO " and entry the following page to select pump: Use in the case of multiple pumps, do not send instructions for single pump.

INV PUMP RATIO	
MIN RATIO	◂ 70 ▸ %
MAX RATIO	◂ 100 ▸ %
OK	

Press "▲" or "▼" to select item to be set and press" ◄ " or " ► " to set value. Press "↵" to confirm. Back to homepage if there is no operation within 60 s. MINRATIO setting should ensure its flow meet the requirement of the whole unit, otherwise the unit may be damaged.

MIN RATIO	MINIMUM RATIO	25 % to 100 %
MAX RATIO	MAXIMUM RATIO	70 % to 100 %

CHECK PARTS

Select " CHECK PARTS " and press "↵" to entry submenu. Display as follows:

CHECK PARTS	
SELECT ADDRESS	◂ 07 ▸ #
FIX PUMP STATE	OFF
INV PUMP STATE	80%
FOUR-WAY VALVE	OFF
SV1 STATE	OFF
BACK 1/3	

CHECK PARTS	
SV2 STATE	OFF
SV4 STATE	OFF
SV5 STATE	OFF
SV6 STATE	OFF
SV8A STATE	OFF
BACK 2/3	

CHECK PARTS	
SV8B STATE	OFF
HEAT1 STATE	OFF
HEAT2 STATE	OFF
COIL VALVE	OFF
BACK 3/3	

Press "▲" or "▼" to view 13 state. Press "⮌" to return to the previous page.

PERCENT OF GLYCOL

Select "PERCENT OF GLYCOL" and press " ↵ " to entry submenu. Display as follows:

PRECENT OF GLYCOL	
GLYCOL TYPE	◂ ETHE ▸
SET THE PRECENT	◂ 70 ▸ %
TSAFE	5 ℃
PAF	0.7 MPa
△PAF	◂ 0 ▸ MPa
BACK	1/2


PRECENT OF GLYCOL	
HISTORICAL SETTING	
04/06/2020 11:30 A	80 %
04/06/2020 11:30 A	80 %
04/06/2020 11:30 A	80 %
04/06/2020 11:30 A	80 %
OK	2/2

Press "▲" or "▼" to select item to be set and press "◄ "or "►" to set value. Press "↵" to confirm. Back to homepage if there is no operation within 60s. Up to 16 historical setting records.

Parameter	Setting range
GLYCOL TYPE	ETHE/PROP
SET THE PERCENT	0 % to 50 %
TSAFE	DISPLAY
PAF	DISPLAY
△PAF	0 MPa to 0.2 MPa
HISTORICAL SETTING	04/06/2020 12:00 A
HISTORICAL SETTING	04/06/2020 12:00 A
HISTORICAL SETTING	04/06/2020 12:00 A

Water Coil Control

Press "▲" and "▼" to select "WATER COIL CONTROL" and press "↵" . Display as follows:

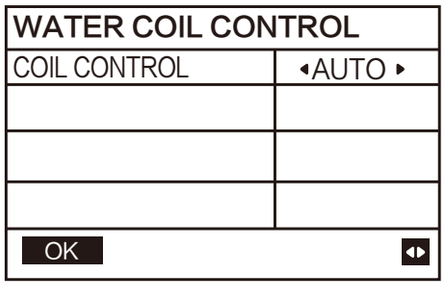

Press "▲" and "▼" to select "COIL CONTROL" and press " ◄ " or " ►" to select control mode:

AUTO (automatically control), MANUALON (with water coil), MANUALOFF (without water coil).

Press "↵" to save. Press "⮌" to exit this page.

NOTE

Water Coil Control is only applicable to FC models.

3.8 Power failure memory function

The power supply to the system fails unexpectedly during operation. When the system is powered on again, the wired controller continues to operate according to the status before the last power failure, including the power-on/off status, mode, set temperature, failure, protection, wired controller address, timer, hysteresis, etc. However, the memorized content must be the content set at least 7s before the power failure.

3.9 Parallel function of wired controller

Parallel function by MODBUS:

1) A maximum of 16 wired controllers can be connected in parallel, and the address can be set in the range of 0 to 15.

2) After multiple wired controllers are connected in parallel, data is shared among them, e.g., the power-on/off function, data settings (such as the water temperature and hysteresis) and other parameters will be kept consistent.

NOTE

The mode, temperature, and hysteresis settings can be shared only when the system is powered on.

3) Start point of data sharing: After the power-on/off button is pressed, data can be shared during parameter adjustment. The "↵" button must be pressed after parameters are adjusted, and the finally adjusted values will be shared.

4) Since the bus is processed in the polling mode, the data of the wired controller which is set last is valid if multiple wired controllers are operated at the same time in the same bus cycle (4s). Avoid the above situation during operation.

5) After any one of parallel wired controllers has been reset, the address of this wired defaults no address and needs to be set manually in order to enter into normal communication.

Parallel function by XYE:

1) A maximum of 16 wired controllers can be connected in parallel.

2) The wired controller need to set to control/monitor controller. The former has control functions, while the latter has only viewing functions.


3.10 Upper computer communication function

1) When communicating with the upper computer, the homepage displays: Communication between the wired controller and the upper compute.

2) If the outdoor main control board is in the remote ON/OFF control mode and the wired controller icon flash. At this point, the upper computer network control setting line control mode switch machine is invalid.

3.11 Monitor wired controller function

When the wired controller is set to monitor wired controller, press the "⊟" to enter the following query interface and related settings of the controller.

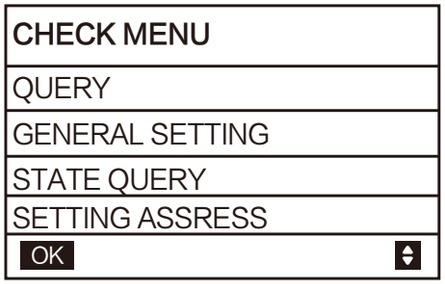

4 ATTACHED TABLE 1:OUTDOOR UNIT ERRORS AND PROTECTION CODES

No.	Error Code	Explanation
1	E0	Main control EPROM error
2	E1	Phase sequence error of main control board check
3	E2	Main control and wired control transmission error
4	2E2	The communication between the mainboard and expansion board is faulty
5	3E2	The communication between the primary and secondary systems is faulty
6	E3	Total water outlet temperature sensor error (valid for the main unit)
7	E4	Unit water outlet temperature sensor error
8	1E5 2E5	Condenser tube temperature sensor T3A error Condenser tube temperature sensor T3B error
9	E6	Water tank temperature sensor T5 error
10	E7	Ambient temperature sensor error
11	E8	Power supply phase sequence protector output error
12	E9	Water flow detection error
13	1Eb 2Eb	Taf1 the pipe of the tank antifreeze protection sensor error Taf2 cooling evaporator low-temperature antifreeze protection sensor error
14	EC	Slave unit module reduction
15	Ed	system discharge temperature sensor error
16	1EE	EVI plate heat exchanger refrigerant temperature T6A sensor error

No.	Error Code	Explanation
	2EE	EVI plate heat exchanger refrigerant temperature T6B sensor error
17	EF	Unit water return temperature sensor error
18	EP	Discharge sensor error alarm
19	EU	Tz sensor error
20	P0	System high-presssure protection or discharge temperature protection
	1P0	Compressor module 1 high pressure protection
	2P0	Compressor module 2 high pressure protection
21	P1	System low pressure protection
22	P2	Tz total cold outlet temperature too high
23	P3	T4 ambient temperature is too high
24	1P4	System A current protection
	2P4	System A DC bus current protection
25	1P5	System B current protection
	2P5	System B DC bus current protection
26	P6	Module error
27	P7	High temperature protection of system condenser for 3 times in 60 minutes(power failure recovery)
28	P9	Water inlet and outlet temperature difference protection
29	PA	Abnormal water inlet and outlet temperature difference protection

No.	Error Code	Explanation
30	Pb	Winter antifreeze protection
31	PC	Cooling evaporator pressure too low
32	PE	Cooling evaporator low temperature antifreeze protection
33	PH	Heating T4 too high temperature protection
34	PL	Tfin module too high temperature protection for 3 times in 60 minutes(power failure recovery)
35	1PU 2PU	DC fan A module protection DC fan B module protection
36	H5	Voltage too high or low
37	xH9	Drive model not matched（x = 1 or 2 ）
38	HC	High pressure sensor error
39	1HE 2HE 3HE	No inset A valve error 1HE No inset B valve error 2HE No inset C valve error 3HE
40	1F0 2F0	IPM module transmission error IPM module transmission error
41	F2	Superheat insufficient
42	1F4 2F4	L0 or L1 protection occurs for 3 times in 60 minutes(power failure recovery) L0 or L1 protection occurs for 3 times in 60 minutes(power failure recovery)
43	1F6 2F6	A system buss voltage error (PTC) B system buss voltage error (PTC)
44	Fb	Pressure sensor error

No.	Error Code	Explanation
45	Fd	Suction temperature sensor error
46	1FF 2FF	DC fan A error DC fan B error
47	FP	DIP switch inconsistency of multiple water pumps
48	C7	3 times PL
49	xL0	L0 module protection（x = 1 or 2）
50	xL1	L1 low-voltage protection（x = 1 or 2）
51	xL2	L2 high-voltage protection（x = 1 or 2）
52	xL4	L4 MCE error（x = 1 or 2）
53	xL5	L5 zero-speed protection（x = 1 or 2）
54	xL7	L7 phase loss（x = 1 or 2）
55	xL8	L8 frequency change over 15 Hz（x = 1 or 2）
56	xL9	L9 frequency phase difference 15 Hz（x = 1 or 2）
57	dF	Defrosting prompt
58	1bH 2bH	Module 1 relay blocking or 908 chip self-check failed Module 2 relay blocking or 908 chip self-check failed

Attached Table 2: Wired control errors and protection codes

No.	Error code	Explanation	Note
1	E2	Main control and wired control transmission error	Recovered upon error recovery
2	E1	Slave unit module reduction	

5 ATTACHED TABLE ABOUT MODBUS

5.1 Communication specification

- Interface:RS-485,H1 on the back of the controller, H2 connected to the serial port of T/R+, H1, H2 as the RS485 differential signal.
- The upper computer is the hust, and the slave machine is the wired controller.
- The SETTING ADDRESS interface in the SERVICE MENU can set Modbus communication Address from 1 to 64.

The communication parameters are as follows:

- baud rate:9600bps.
- Date length:8 Data bits.
- check:None Parity.
- Stop bit:1 stop bit.
- commumication protocol:Modbus RTU.

5.2 Supported function codes and exception codes

Function code	Explain
03	Read Holding Registers Number of continuous read registers per pass ≤ 20
06	Write Single Register
16	Write multiple registers Number of continuous read registers per pass ≤ 20

Exception code specification

Exception code	MODBUS name	Remarks
01	illegal function code	Function code not supported by wired controller
02	illegal data address	The address sent in query or setting is undefined in the wired controller
03	illegal data values	The set parameter is an illegal value, which exceeds the reasonable set range

If 138 address of Modbus control switch is not written as “1”, all but 138 addresses can not be written.

5.3 Address mapping in register of wired controller

Addresses below can be used as 03(Read Holding Registers), 06 (Write Single Register), 16(Write Multiple Registers)		
Register Address	Data Content	Remark
0	Modeset	（1 Cool、2 Heat、4 DHW 、8 Off） The DHW mode is only effective for DHW models and for single pump systems. Invalid when remote control of outside unit = ON 1 Cooling、8 Off Only Cool/Free Cooling models can only be set to: 1 Cooling, 8 Off
1	Set Two Temperature A	COOL MODE Only Cool & Free Cooling : (Max(-8, TSafe)℃ ~20 ℃) Heat pump: R32 -10 ℃~25 ℃ R290 -5 ℃~25 ℃ HEAT MODE Only Cool & Free Cooling : (25 ℃~55 ℃) Heat pump: R32 normal 25 ℃~60 ℃ high temperature 25 ℃~65 ℃ Heat pump: R290 normal 25 ℃~75 ℃ high temperature 25 ℃~85 ℃

Register Address	Data Content	Remark
2	Set Two Temperature B	COOL MODE Only Cool & Free Cooling : (Max(-8, TSafe)℃ ~20 ℃) Heat pump: R32 -10 ℃~25 ℃ R290 -5 ℃~25 ℃ HEAT MODE Only Cool & Free Cooling : (25 ℃~55 ℃) Heat pump: R32 normal 25 ℃~60 ℃ high temperature 25 ℃~65 ℃ Heat pump: R290 normal 25 ℃~75 ℃ high temperature 25 ℃~85 ℃
3	Offset Temperature OFFSET-C/OFFSET-H	COOL(0 ℃~15 ℃) HEAT (0 ℃~30 ℃)
4	Water Set Temperature	T5sMin℃~ T5sMax℃ (master transmitter) Heat pump: R32 normal 30 ℃~60 ℃ high temperature 30 ℃~70 ℃ Heat pump: R290 normal 20 ℃~70 ℃ high temperature 20 ℃~80 ℃ （Available for single pump） The model without DHW function is invalid.

Register Address	Data Content	Remark
5	Water Offset Temperature	Reserved Set 0
6	Clear Lock Errs	(0 Invalid, 1 Clear Fault, other values are invalid)Clear all lock errors
7	Snow blowing switch	Enable/Disable 1/0
8	reserved	reserved
9	Unit Conversions	0: Metric 1: Inch
100	Silent Mode	1： Standard mode 2： Silent mode 3： Night silent mode 1 4： Night silent mode 2 5： Night silent mode 3 6： Night silent mode 4 7： Super silent mode
101	DOUBLE SETPOINT Dual target temperature setting	Enable/Disable 1/0

Register Address	Data Content	Remark
102	SETPOINT COOL_1 First target temperature in cooling	COOL MODE Only Cool & Free Cooling : (Max(-8, TSafe)℃ ~20 ℃) Heat pump: R32 -10 ℃~25 ℃ R290 -5 ℃~25 ℃
103	SETPOINT COOL_2 Second target temperature in cooling	COOL MODE Only Cool & Free Cooling : (Max(-8, TSafe)℃ ~20 ℃) Heat pump: R32 -10 ℃~25 ℃ R290 -5 ℃~25 ℃
104	SETPOINT HEAT_1 First target temperature in heating	HEAT MODE Only Cool & Free Cooling : (25 ℃ ~55 ℃) TSafe)℃ ~20 ℃) Heat pump: R32 normal 25 ℃~60 ℃ high temperature 25 ℃~65 ℃ Heat pump: R290 normal 25 ℃~ 75 ℃high temperature 25 ℃~85 ℃
105	SETPOINT HEAT_2 Second target temperature in heating	HEAT MODE Only Cool & Free Cooling : (25 ℃ ~55 ℃) TSafe)℃ ~20 ℃) Heat pump: R32 normal 25 ℃~60 ℃ high temperature 25 ℃~65 ℃ Heat pump: R290 normal 25 ℃~ 75 ℃high temperature 25 ℃~85 ℃

Register Address	Data Content	Remark
106	COOL MODE ENABLE Temperature compensation function setting in cooling	Enable/Disable
107	T4_COOL_1 Temperature compensation point 1 in cooling mode	15 ℃~30 ℃
108	T4_COOL_2 Temperature compensation point 2 in cooling mode	35 ℃~45 ℃
109	OFFSET-C Temperature compensation value in cooling	0 ℃~15 ℃
110	HEAT MODE ENABLE Temperature compensation function setting in heating	Enable/Disable
111	T4_HEAT_1 Temperature compensation point 1 in heating mode	-25 ℃~15 ℃
112	T4_HEAT_2 Temperature compensation point 2 in heating mode	15 ℃~30 ℃

Register Address	Data Content	Remark
113	OFFSET-H Temperature compensation value in heating	0 ℃~30 ℃
114	FORCED HEAT2 OPEN	Enable/Disable 1/0 （Available for single pump） Before Electric Auxiliary Heating 2 is enabled, forced activation is not allowed.
115	DHW SWITCH Water heating switch	Enable/Disable 1/0 （Available for single pump）
116	TWO_COOL_DIFF Differential temperature of unit outlet water in cooling	1 ℃~ 5 ℃
117	TWO_HEAT_DIFF Differential temperature of unit outlet water in heating	1 ℃~ 5 ℃
118	DT5_ON Differential temperature of unit outlet water in water heating	2 ℃~ 10 ℃ The model without DHW function is invalid.

Register Address	Data Content	Remark
119	DT1S5 Temperature difference of heat exchange in water heating	5 ℃~ 20 ℃ The model without DHW function is invalid.
120	TIM_CAP_ADJ Capacity adjustment period	60 S - 360 S Adjustment range 20 s
121	TW_COOL_DIFF/ TW_ HEAT_DIFF Differential temperature of total outlet water	COOL MODE: 1 ℃~ 5 ℃ HEAT MODE: 1 ℃~ 5 ℃
122	RATIO_COOL_FIRST Initial startup ratio in cooling	5 %~100 % Adjustment range 5 %
123	RATIO_HEAT_FIRST Initial startup ratio in heating	5 %~100 % Adjustment range 5 %
124	T_DIFF_PRO Protection of temperature difference between inlet and outlet water	Normal 8 ℃~ 15 ℃ High temperature 8 ℃~25 ℃

Register Address	Data Content	Remark
125	T_FROST Defrost period	20min~120min Adjustment range 5min
126	T_DEFROST_IN Entry temperature of defrosting	-5 ℃~ 5 ℃
127	T_FROST_OUT Exit temperature of defrosting	-10 ℃~ 10 ℃
128	HEAT1 ENABLE Auxiliary electric heater	Enable/Disable 1/0
129	TEMP_AUXHEAT1_ON Available ambient temperature of auxiliary electric heater	0 ℃~10 ℃ Unavailable for Only Cool & Free Cooling -15 ℃~10 ℃ Pipe-assisted electric heating available ambient temperature needs to be ≥ HEAT1 heat pump stop working ambient temperature

Register Address	Data Content	Remark
130	TW_HEAT1_ON Opening water temperature of auxiliary electric heater	Heat Pump: 0 ℃~59 ℃ The "turn-on water temperature" must be lower than the "turn-off water temperature". (This parameter is not valid)
131	TW_HEAT1_OFF Closing water temperature of auxiliary electric heater	Heat Pump: 1 ℃~60 ℃ The "turn-off temperature" must be higher than the "turn-on temperature". (This parameter is not valid)
132	HEAT2 ENABLE Auxiliary electric heater of water tank is enabled/ disabled	Enable/Disable 1/0 Available for single pump The model without DHW function is invalid.
133	T_HEAT2_DELAY Delay opening time of auxiliary electric heater of water tank	60 min~240 min Adjustment range: 5 minutes (Available for single pump) The model without DHW function is i nvalid.

Register Address	Data Content	Remark
134	DT5_HEAT2_0FF Hysteresis when auxiliary electric heater of water tank stops	2 ℃~10 ℃ (Available for single pump) The model without DHW function is invalid.
135	T4_HEAT2_ON Available ambient temperature of auxiliary electric heater of water tank	-5 ℃~20 ℃ (Available for single pump) The model without DHW function is invalid. -15 ℃~20 ℃ Ambient temperature of the water tank with electrically assisted heating available > HEAT2 heat pump stop working ambient temperatur
136	SWITCH ON THE PUMP Startup of inverter water pump	Enable/Disable 1/0 Available for single pump
137	RATIO-PUMP Startup percentage of inverter water pump	30 %-100 % Adjustment range of 5% (Available for single pump) Startup percentage of Inverter water pumps are not allowed until Enable is turned on.

Register Address	Data Content	Remark
138	MODBUS ENABLE Modbus write enable switch	Enable/Disable Write operation valid / Write operation invalid 1/0
139	Glycol type	0 : ETHYLENE 1 : PROPYLENE (Available for Only Cool & Free Cooling)
140	Percent of glycol	0 %~50 % Adjustment range of 5 % (Available for Only Cool & Free Cooling)
141	Δpaf	0 ~ 20 : 0.0 ~ 0.2 Mpa Actual value * 100, adjustment range 5 : 0.05 Mpa Psi is the actual value, and takes the values of 0, 5, 15, 20, 30 Psi. (Available for Only Cool & Free Cooling) Heat pump models are not valid
142	Water Coil Control	0 : AUTOMATIC 1 : MANUAL 1 2 : MANUAL 2 (Available for Free Cooling)

Register Address	Data Content	Remark
143	DtTws	1 ℃~3 ℃ (Available for Free Cooling)
144	Dtmix	1 ℃~3 ℃ (Available for Free Cooling)
145	FCoffset	1 ℃~15 ℃ (Available for Free Cooling)
146	FChy	1 ℃~3 ℃ (Available for Free Cooling)
147	TWI-O ABNORMAL	1 ℃~5 ℃
148	LOW OUTLETWATER CONTROL	R32 -10~25 ℃ R290 -5~25 ℃
149	Energy saving switch	40 %~100 % Adjustment range of 10 % 100 % indicates that the energy saving mode is off
150	Set E9 time	2 s~20 s
151	E9 Detection Method	1: Rake flow is not detected before the water pump is turned on 2: Detecting rake flow before water pumps are turned on

Register Address	Data Content	Remark
152	Invert pump min ratio	40~Min(100 %, Invert pump max ratio) Adjustment range of 5 % Multi-pump DHW models are effective
153	Invert pump max ratio	Max(70 %, Invert pump min ratio)~100 % Adjustment range of 5 % Multi-pump DHW models are effective
154	Pump On Time	5 min~60 min Adjustment range: 5 min 0 min~60 min Adjustment range: 5 min
155	Pump Off Time	0 min~60 min Adjustment range: 5 min
156	TW_COOL_DIFF Cool mode differential temperature of total outlet water	1 ℃~ 5 ℃ Normall heat pump models, effective for the main unit only when the setting mode is heating
157	TW_HEAT_DIFF Heat mode differential temperature of total outlet water	1 ℃~ 5 ℃ Unavailable for Only Cool & Free Cooling) Normall heat pump models, effective for the main unit only when the setting mode is heating

Register Address	Data Content	Remark
158	Electric heater 1 activation differential temperature DTW_HEAT1_ON	1 ℃~10 ℃
159	Electric heater delayed activation	15 min~120 min Adjustment range: 5 min
160	Ambient temperature for heat pump shutdown (HEAT1) T4_HEATPUMP_OFF1	-30 ℃~10 ℃ HEAT1 heat pump stop working ambient temperature needs to be ≤ pipe-assisted electric heating available ambient temperature
161	Forced activation of pipeline electric heating FORCED-HEAT1-OPEN	Enable/Disable 1/0 On/Off
162	Ambient temperature for heat pump shutdown (HEAT2) T4_HEATPUMP_OFF2	-30 ℃~10 ℃ HEAT2 heat pump stop working ambient temperature needs to < water tank electric auxiliary heat available ambient temperature

NOTE

06, 16 Write register, if the value is written beyond the scope of the note, the exception code is returned.

Addresses below can be used as 03(Read Holding Registers), 06(Write Single Register)		
Register Address	Data Content	Remark
200+(Unit Address)*100	Reserved	
201+(Unit Address)*100	HEAT2 EANBLE Auxiliary electric heater HEAT2 of the selected unit is enabled.	Enable/Disable 1/0(Multi-pump DHW models are valid)
202+(Unit Address)*100	FORCED HEAT2 ON Auxiliary electric heater HEAT2 forced ON of the selected unit	ON/OFF 1/0（Multi-pump DHW models are valid) Setting the HEAT2 switch state is not allowed until HEAT2 is valid Automatic zeroing after line control sends a command to the external unit

Register Address	Data Content	Remark
203+(Unit Address)*100	T-HEAT2-DELAY Delay opening time of auxiliary electric heater HEAT2 of the selected unit	60 min~240 min Adjustment range 5 min (Multi-pump DHW models are valid)
204+(Unit Address)*100	DT5-HEAT2-OFF Hysteresis when auxiliary electric heater HEAT2 of the selected unit stops	2 ℃~10 ℃(Multi-pump DHW models are valid)
205+(Unit Address)*100	T4-HEAT2-ON Available ambient temperature of auxiliary electric heater HEAT2 of the selected unit	-15 ℃~20 ℃ (Multi-pump DHW models are valid) Ambient temperature of the water tank with electrically assisted heating available > HEAT2 heat pump stop working ambient temperature

Register Address	Data Content	Remark
206+(Unit Address)*100	DHW SWITCH Water heating function of the selected unit is enabled	Enable/Disable 1/0 (Multi-pump DHW models are valid) After turning on the hot water heating, the "0 hot water heating mode" will automatically be set to off
207+(Unit Address)*100	DHW MODE ON/OFF Water heating function switch of the selected unit	ON/OFF 1/0 (Multi-pump DHW models are valid) The register cannot be written to before the water heating function is effective
208+(Unit Address)*100	DHW FIRST Water heating priority of the selected unit	Enable/Disable 1/0 (Multi-pump DHW models are valid)
209+(Unit Address)*100	COOL MAX TIME Maximum cooling time in the water heating mode of the selected unit	30 min~1 440 min Adjustment range: 30 min (Multi-pump DHW models are valid)

Register Address	Data Content	Remark
210+(Unit Address)*100	COOL MIN TIME Minimum cooling time in the water heating mode of the selected unit	30 min~1 440 min Adjustment range: 30 min (Multi-pump DHW models are valid)
211+(Unit Address)*100	HEAT MAX TIME Maximum heating time in the water heating mode of the selected unit	30 min~1 440 min Adjustment range: 30 min (Multi-pump DHW models are valid)
212+(Unit Address)*100	HEAT MIN TIME Minimum heating time in the water heating mode of the selected unit	30 min~1 440 min Adjustment range: 30 min (Multi-pump DHW models are valid)
213+(Unit Address)*100	DHW MAX TIME Maximum water heating time in the water heating mode of the selected unit	30 min~1 440 min Adjustment range: 30 min (Multi-pump DHW models are valid)

Register Address	Data Content	Remark
214+(Unit Address)*100	DHW MIN TIME Minimum water heating time in the water heating mode of the selected unit	30 min~1 440 min Adjustment range: 30 min (Multi-pump DHW models are valid)
215+(Unit Address)*100	SWITCH ON THE PUMP Startup of inverter water pump of the selected unit	Enable/Disable 1/0 (Multi-pump effective)
216+(Unit Address)*100	RATIO-PUMP Startup percentage of inverter water pump of the selected unit	30 %~ 100 % Adjustment range 5 % (Multi-pump effective)

Register Address	Data Content	Remark
217+(Unit Address)*100	T5S Water Set Temperature of the selected unit	R32 Normal 30 ℃ ~60 ℃ High temperature 30 ℃~70 ℃ R290 Normal 20 ℃~70 ℃ High temperature 20 ℃ ~80 ℃ (Multi-pump DHW models are valid)

NOTE

- 06 Write register, if the value is written beyond the scope of the note, the exception code is returned.
- Unit Address stands for machine address 0-15, 0 stands for host 0.

Addresses below can be used as 03(Read Holding Registers)		
Register Address	Data Content	Remark
240+(Unit Address)*100	Running Mode	1.turn off 2.cooling 3.heating 4.DHW
241+(Unit Address)*100	Current silent mode	1.Standard mode 2.Silent mode 3.Super silent mode 4.Night silent mode 1 5.Night silent mode 2 6.Night silent mode 3 7.Night silent mode 4
242+(Unit Address)*100	DHW SetTemperature T5s	Set temperature for heating water Unit: 1 °C Single pump system: All outdoor units have the same value. Multi-pump system: Each outdoor unit has an independent set value.

Register Address	Data Content	Remark
243+(Unit Address)*100	DHW SetTemperature B（Reserved）	Reserved Set 0
244+(Unit Address)*100	Twi Unit inlet water temperature	Unit: 1 °C 255： Invalid data
245+(Unit Address)*100	Two Unit outlet water temperature	Unit: 1 °C 255： Invalid data
246+(Unit Address)*100	Tw Total outlet water temperature	Unit: 1 °C Only the data from main unit 0 is valid 255： Invalid data
247+(Unit Address)*100	T4 Outdoor ambient temperature	Unit: 1 °C Only the data from main unit 0 is valid 255： Invalid data
248+(Unit Address)*100	Compressor Speed	Unit: 1 Hz
249+(Unit Address)*100	Current of Compressor 1	Unit: 1 A

Register Address	Data Content	Remark
250+(Unit Address)*100	Fan1Speed	Actual Rotation Speed
251+(Unit Address)*100	Fan2Speed	Actual Rotation Speed
252+(Unit Address)*100	Fan3Speed	Actual Rotation Speed
253+(Unit Address)*100	EXVA	Actual Rotation Speed
254+(Unit Address)*100	EXVB	Actual Rotation Speed
255+(Unit Address)*100	EXVC	Actual Rotation Speed
256+(Unit Address)*100	SV4	0 Off, 1 On
257+(Unit Address)*100	SV5	0 Off, 1 On
258+(Unit Address)*100	SV8A	0 Off, 1 On
259+(Unit Address)*100	SV8B	0 Off, 1 On
260+(Unit Address)*100	FOUR-WAY VALVE	0 Off, 1 On
261+(Unit Address)*100	WATER PUMP	0 Off, 1 On
262+(Unit Address)*100	SV1 STATE	0 Off, 1 On
263+(Unit Address)*100	SV2 STATE	0 Off, 1 On
264+(Unit Address)*100	HEAT1 STATE	0 Off, 1 On Only the data from main unit 0 is valid

Register Address	Data Content	Remark
265+(Unit Address)*100	HEAT2 STATE	0 Off, 1 On Non-heating water heater models are not equipped with this feature, data is invalid.
266+(Unit Address)*100	Tp1 Discharge temperature 1	Unit: 1 °C 255： Invalid data
267+(Unit Address)*100	Th Suction temperature	Unit: 1 °C 255： Invalid data
268+(Unit Address)*100	T3 TEMP	The minimum values of T3A and T3B, unit: 1 ℃ 255： Invalid data
269+(Unit Address)*100	Tz TEMP	Unit: 1 °C 255： Invalid data
270+(Unit Address)*100	T5 TEMP	Unit: 1 °C Non-heating water heater models are not equipped with this feature, data is invalid. 255： Invalid data
271+(Unit Address)*100	Heat Pump : P PRESSURE Only Cool & Free Cooling : EVA PRESSURE	Unit: 10 kPa 0： Invalid data

Register Address	Data Content	Remark
272+(Unit Address)*100	MainBoard Err or protect	Modbus Fault Code Analysis
273+(Unit Address)*100	MainBoard Last Err or protect	Modbus Fault Code Analysis
274+(Unit Address)*100	HMI Software Version	Modbus Fault Code Analysis
275+(Unit Address)*100	Tp2 Discharge temperature 2	Unit: 1 °C 255： Invalid data
276+(Unit Address)*100	T5sMin	Unit: 1 °C Non-heating water heater models are not equipped with this feature, data is invalid. 255： Invalid data
277+(Unit Address)*100	T6A TEMP	Unit: 1 °C 255： Invalid data
278+(Unit Address)*100	Wire Control Err	List of outdoor unit fault codes
279+(Unit Address)*100	SV6 STATE	0 Off, 1 On
280+(Unit Address)*100	Current of Compressor 2	Unit: 1 A

Register Address	Data Content	Remark
281+(Unit Address)*100	Unit Capacity	Unit: 1 kW
282+(Unit Address)*100	Defrost	0 No, 1 Yes
283+(Unit Address)*100	Anti-freezing electric heater	0 Off, 1 On
284+(Unit Address)*100	Remote control	0 Off, 1 On External unit address reading valid for No. 0
285+(Unit Address)*100	FCT working state	0 Off, 1 On External unit address reading valid for No. 0 Valid only if the main unit enters FCT2/FCT3
286+(Unit Address)*100	Pump group status	1: Multi-pump 0: Single pump
287+(Unit Address)*100	ODU Type	0： Normal Heat Pump 1： Only Cool 2： Free Cooling
288+(Unit Address)*100	T5sMax	Unit: 1 °C Non-heating water heater models are not equipped with this feature, data is invalid.

Register Address	Data Content	Remark
289+(Unit Address)*100	Tsafe	Unit: 1 °C (valid for Only Cool/Free Cooling models)
290+(Unit Address)*100	PAF	Unit: 10 kPa (valid for Only Cool/Free Cooling models) Invalid heat pump model
291+(Unit Address)*100	Taf1 IN-LET BPHE TEMP	Unit: 1 °C 255： Invalid data
292+(Unit Address)*100	MainBoard Software Version	Current main board program version number Note: The old model of the heat pump does not have this value; when the value is 0, it indicates that the external unit does not have this data.

Register Address	Data Content	Remark
293+(Unit Address)*100	MainBoard EEPROM Version	Current main control board EEPROM program version number Note: The old model of the heat pump does not have this value; when the value is 0, it indicates that the external unit does not have this data.
294+(Unit Address)*100	COND PRESSURE	Unit: 10 kPa (valid for Free Cooling models) 0: Invalid data Note: The old model of the heat pump does not have this value;
295+(Unit Address)*100	T6B TEMP	Unit: 1 °C 255: Invalid data
296+(Unit Address)*100	TAF2 TEMP	Unit: 1 °C 255: Invalid data
297+(Unit Address)*100	TFIN1 TEMP	Unit: 1 °C 255: Invalid data

Register Address	Data Content	Remark
298+(Unit Address)*100	TFIN2 TEMP	Unit: 1 °C 255： Invalid data
299+(Unit Address)*100	TFIN3 TEMP (Reserved)	Unit: 1 °C 255： Invalid data

NOTE

Unit Address stands for machine address 0-15, 0 stands for host 0.

Register Address	Data Content	Remark
2300+(Unit Address)*200	DSH TEMP	Unit: 1 °C 255： Invalid data
2301+(Unit Address)*200	SSH TEMP	Unit: 1 °C 255： Invalid data
2302+(Unit Address)*200	CSH TEMP	Unit: 1 °C 255： Invalid data
2303+(Unit Address)*200	Invert Pump Running Percent	0 %~100 %
Note:Unit Address stands for machine address 0-15,0 stands for host 0.		

Modbus Fault Code Analysis (Applicable to Registers x272, x273)		
This table is applicable for converting registers x272 and x273 to the corresponding fault codes. Please refer to the Attached Table 1:Outdoor unit errors and protection codes.		
	NO.	Fault codes.
Bit0-Bit7	0	No fault
	1-20	E0-EF,EH,EL,EP,EU
	21-40	P0-PF,PH,PL,PP,PU
	41-60	H0-HF,HH,HL,HP,HU
	61-80	F0-FF,FH,FL,FP,FU
	81-100	C0-CF,CH,CL,CP,CU
	101-120	L0-LF,LH,LL,LP,LU
	121-140	d0-dF,dH,dL,dP,dU
	141-160	b0-bF,bH,bL,bP,bU
	161-180	Reserved
	181-200	Reserved
	201-220	Reserved

	NO.	Fault codes.
Bit0-Bit7	221-240	Reserved
	241-255	Reserved
Bit8-Bit15	Fault NO.	

example
1) If the fault code Bit0-Bit7 is 10 and Bit8-Bit15 is 0, then the fault code is E9.
2) If the fault code Bit0-Bit7 is 6 and Bit8-Bit15 is 1, then the fault code is 1E5.

16127100A09331 V1.4

Importer/EU Responsible person:

FRIGICOLL SA

C/BLASCO DE GARAY, 4-6
08960 SANT JUST DESVERN
BARCELONA
SPAIN
Tel:+34 93 480 33 22, URL: www.frigicoll.com

Manufacturer:

GD Midea Heating & Ventilating Equipment Co.,Ltd.

Penglai Industry Road,Beijiao,
Shunde, Foshan,
Guangdong,528311,P.R.China
URL:https://www.midea.com/global

技术要求
规格：120*120mm
材料：封面封底120g双胶纸，内页双胶纸80g、双面黑白印刷

更改说明（本页不打印）

版本升级	更改人	更改日期	更改主要内容	涉及更改页面 （印刷页码）
v1.0-v1.1	李娟	2024.7.24	随基准升级	全文
V1.1-V1.2	李娟	2024.8.16	更新欧盟信息	
V1.2-V1.3	李娟	2024.8.26	更新欧盟信息	
V1.3-V1.4	屈小平	24.10.5	随基准变更（张丙） 新增参数表格	整本内容